# CONFIGURATION

#### **MAIN PAGE**

On this menu, the user can overview system operations.



The menus can be changed on the right side of the window.

Icons color meaning		
×	Gray	This condition doesn't have to be met because it's disabled
×	Grayed out	This condition is enabled, but it can't be met right now
×	Yellow	This condition must be met and is waiting for the person to do it
×	Green	Everything is okay, you're clear to enter
×	Orange	From now on you can enter only with L2 allowance
×	Red	Something is wrong, you must not enter

St	atus overview	
×	Occupation status and limit count	It shows occupied status and remaining count to the limit of people
×	Disinfector status	It shows if person had applied a disinfector
×	Allowance status	It shows if person has a fever and if he wears a facemask
×	Card reader	It shows if the use of entry card is needed and the user's level of access
×	Confirmation status	It shows if the receptionist had left you in and the person's level of access
×	Enter status	It shows if person should enter or exit



This is the gate status overview.

#### Gate status overview It TOF sensor detects person, the entrance sensor (right) turns on for the 1 Door sensors people coming in, or the exit sensor (left) turns on for the people going out If both red and green light are turned on, the entrance conditions must be met (card, face sensor, disinfector, ...), if the green light is turned on you can enter, if the red light is turn on you can't enter. If the semaphore beeper is turned on 2 Semaphore status along with a red light, the person must exit the building immediately. Beeper can be disabled on the System setup menu or it can be set that it resets when the person exits the building 3 Gate status It shows if gates are closed or open 4 Presence status It shows if the presence sensor has been triggered It shows if person has a fever and if he wears a face mask. It can be set, in the System setup menu, on permission mode, which means the doors are closed Thermo and mask and they open if you pass the temperature and mask condition (among the camera status others). Or it can be set on prevention mode, which means the doors are open, but they close if you don't pass that condition.

6 Disinfector status	It shows if a person applied disinfector
7 Code reader	It shows the status of access
Configuration	
Set count	Set count for total number of people counted in space
Confirm L1	If the condition for L1 access are met, the button will become enabled
Confirm L2	If the condition for L2 access are met, the button will become enabled
Reset alarm	Resets alarm
Gate auto/gate opened	Switches between gates opening automatically with security measures or opening manually. When they can be opened manually it usually means it's because of emergency and everyone must leave the building immediately

### **ACCESS SETTINGS**

On this menu, the code and access status can be added.



Configuration		
Edit code	Manually input new user's code, alternatively you can scan it with the card scanner	
Туре	Set user level of access, which are L1 for normal users, L2 for VIPs and UL unlimited access (employees)	
Code list	All the users are saved here, choose user to edit it's code and type, holds up to 100 users	
	Checks the code list for desired code, which the user inputs in the edit code section. The code number and type are then returned.	
Save	Saves the created edit code	
Clear	Clears the edit code and type	
Delete	Deletes the code from the code list	

## **SYSTEM SETUP**

When the system is connected and turned on, the technician sets these settings.



Configuration		
Limit 1	This is the limit for normal access, everyone can enter. After this limit is reached, only VIPs and employees can enter (no more L1 access)	
Limit 2	This is the limit for VIP access, L2 and UL can enter. After this limit is reached, only employees can enter (UL access only)	
Counting type	Choose if the counting of people is with digital IO or communication	
Presence time-out	Set how long the presence sensor is active after detecting someone	
Entry gate time-out	Set how long the entry doors are open after the TOF sensor has detected someone	
Exit gate time-out	Set how long the exit doors are open after the TOF sensor has detected someone	

http://wiki.hiq-home.com/ Printed on 2025/08/23 18:41

Alarm duration Sets		duration time of the alarm	
Alarm beeper enabled Enal		ble or disable alarm beeper	
Reset alarm on exit Enal		ble or disable the reset of alarm on exit	
allowance cond	ition mu	ve to be met if everything is enabled: disinfection and ust be met and then just one of other two conditions ns either reader or confirmation condition.	
Disinfection		Sets if disinfection is necessary for user's level of access, sets time-out that triggers after check	
Allowance		Sets if face mask and temperature check is necessary for user's level of access, sets time-out that triggers after check	
Reader		Sets if scanning card on the reader is necessary for user's level of access, sets time-out that triggers after check	
Confirmation		Sets if receptionist confirmation is necessary for user's level of access, sets time-out that triggers after check	
Allowance type		If set on permission, door opens when user is clear to enter after ok allowance check, if set on prevention, door closes when users fails allowance check	
Internet access			
Enable push to server		ole connection to the cloud server (allow controller to send odical push message to server) every 30 seconds	
		l push message instantly	
Reset	Rese	t number of sent messages	
		vs countdown after which the push message will be sent	
IMPEGAUDE		ber of all sent messages and number of successfully sent sages	
TROUDOLTIN		e it takes the message to get to server and the response to e back	
Master code	code is s code is s scanned they are	e which employee has on a card or qr code. When the master scanned, red an green light will start flashing. If the master scanned, then normal cards are scanned and master code is again, all the normal cards will be added to the code list (if en't already on it) and they will be granted L2 access. If master scanned and then scanned again, all the entries on code list will sed	
Send LAN code query	If scanned code is not on the code list for that device, a query will be sent to other devices in the system. If it gets the response from other device, that the code is on it's list, access is granted		
Process LAN code query	Enable to process code query and send back answer		
LAN query timeout		Set query timeout. If the device that sent query doesn't get answer in set time, it refuses access	
		nes for other controllers in the network and opens a menu with ontrollers. If the other controller is chosen, you manage this one	
Parameters con	ifigurati	ion	
Init parameters	<u> </u>	ameters to the ones saved in permanent memory	
Save parameters	Save se	t configuration to the permanent memory	
Read parameters	Read pa	arameters from the permanent memory and write them to work ters	

<sup>-</sup> http://wiki.hiq-home.com/

# **DISPLAY SETTINGS**



Paramet	Parameters configuration for alphanumeric display				
Line 1					
Presence		Set text that will be displayed on first line when proximity detector detects someone			
Advertisir	ng 01-09	Set text that will be displayed when proximity detector isn't detecting anybody			
Advertisir	ng text time	Set timer at which the advertising text changes			
Line 2					
Counters		Displays number of people with L1 and with L2 access in the building			
Line 3					
Enter		Set the text that will be displayed when person is allowed to enter			
Disinfect		Set the text that will be displayed when person has to disinfect hands			
Camera		Set the text that will be displayed when person has to look at the camera			
Confirm		Set the text that will be displayed when waiting for confirmation to enter			
Code		Set the text that will be displayed when person has to scan the code			
Occupied		Set the text that will be displayed as long as the limit of people inside is reached			
Fever		Set the text that will be displayed if fever is detected			
Exit		Set the text that will be displayed if the person has to exit the building			
Paramet	ers configu	ration for graphic display			
Caption					
Full	Set text tha	at will be displayed if the place is full			
Level 2	Set text that will be displayed when the limit of people for L1 access is reached and only people with L2 access are allowed to enter				
Level 1	Set text tha	at will be displayed if no limit of people is reached			
Alarm	Set text tha	at will be displayed if alarm is triggered			
Warning	Set text that will be displayed if warning is triggered				
Text					
Enter	Set the text that will be displayed when person is allowed to enter				
Disinfect	Set the text that will be displayed when person has to disinfect hands				
Camera	Set the text that will be displayed when person has to look at the camera				
Confirm	Set the text that will be displayed when waiting for confirmation to enter				
Code	Set the text that will be displayed when person has to scan the code				
Occupied	Set the text that will be displayed as long as the limit of people inside is reached				
Fever	Set the text that will be displayed if fever is detected				
Exit	Set the text that will be displayed if the person has to exit the building				

http://wiki.hiq-home.com/ Printed on 2025/08/23 18:41

From:

http://wiki.hiq-home.com/ -

Permanent link:

http://wiki.hiq-home.com/doku.php?id=en:3s:configuration&rev=1592814710

Last update: 2020/06/22 08:31

