CONFIGURATION

MAIN PAGE

On this menu, the user can overview system operations.

×

The menus can be changed on the right side of the window.

lc	ons color n			
×	Gray	This condition doesn't have to be met because it's disabled		
×	Grayed out	This condition is ena	abled, but it can't be met right now	
×	Yellow This condition must k		be met and is waiting for the person to do it	
×	Green Everything is okay, y		you're clear to enter	
×	Orange From now on you ca		n enter only with L2 allowance	
×	Red	Something is wrong	, you must not enter	
St	Status overview			
×	Occupation count	status and limit	It shows occupied status and remaining cour people	nt to the limit of
×	Disinfector status		It shows if person had applied a disinfector	
×	Allowance status		It shows if person has a fever and if he wear	s a facemask
×	Card reader		It shows if the use of entry card is needed ar access	nd the user's level of
×	Confirmation status		It shows if the receptionist had left you in an access	d the person's level of
×	🗙 Enter status		It shows if person should enter or exit	

```
×
```

This is the gate status overview.

G	Gate status overview		
1	Door sensors	It TOF sensor detects person, the entrance sensor (right) turns on for the people coming in, or the exit sensor (left) turns on for the people going out	
2	Semaphore status	If both red and green light are turned on, the entrance conditions must be met (card, face sensor, disinfector,), if the green light is turned on you can enter, if the red light is turn on you can't enter. If the semaphore beeper is turned on along with a red light, the person must exit the building immediately. Beeper can be disabled on the System setup menu or it can be set that it resets when the person exits the building	
3	Gate status	It shows if gates are closed or open	
4	Presence status	It shows if the presence sensor has been triggered	
5	Thermo and mask camera status	It shows if person has a fever and if he wears a face mask. It can be set, in the System setup menu, on permission mode, which means the doors are closed and they open if you pass the temperature and mask condition (among the others). Or it can be set on prevention mode, which means the doors are open, but they close if you don't pass that condition	

6 Disinfector status	It shows if a person applied disinfector
7 Code reader	It shows the status of access
Configuration	
Set count	Set count for total number of people counted in space
Confirm L1	If the condition for L1 access are met, the button will become enabled
Confirm L2	If the condition for L2 access are met, the button will become enabled
Reset alarm	Resets alarm
Gate auto/gate opened	Switches between gates opening automatically with security measures or opening manually. When they can be opened manually it usually means it's because of emergency and everyone must leave the building immediately

ACCESS SETTINGS

On this menu, the code and access status can be added.

×

Configur	Configuration		
Edit code	Manually input new user's code, alternatively you can scan it with the card scanner		
Туре	Type Set user level of access, which are L1 for normal users, L2 for VIPs and UL unlimited access (employees)		
Code list	de list All the users are saved here, choose user to edit it's code and type, holds up t 100 users		
Search	Checks the code list for desired code, which is inputted in the edit code section. The code number and type are then returned		
Save	Saves the created edit code		
Clear	Clears the edit code and type		
Delete	Deletes the code from the code list		

SYSTEM SETUP

When the system is connected and turned on, the technician sets these settings.

×

Configuration		
Limit 1	This is the limit for normal access, everyone can enter. After this limit is reached, only VIPs and employees can enter (no more L1 access)	
Limit 2	This is the limit for VIP access, L2 and UL can enter. After this limit is reached, only employees can enter (UL access only)	
Counting type	Choose if the counting of people is with digital IO or communication	
Presence time-out	Set how long the presence sensor is active after detecting someone	
Entry gate time-out	Set how long the entry doors are open after the TOF sensor has detected someone	
Exit gate time-out	Set how long the exit doors are open after the TOF sensor has detected someone	

Alarm duration	Sets duration time of the alarm	
Alarm beeper enabled	Enable or disable alarm beeper	
Reset alarm on e	tit Enable or disable the reset of alarm on exit	
allowance cond	hat have to be met if everything is enabled: di tion must be met and then just one of other tw at means either reader or confirmation conditi	o conditions
Disinfection	Sets if disinfection is necessary for user's le time-out that triggers after check	
Allowance	Sets if face mask and temperature check is user's level of access, sets time-out that trig	
Reader	Sets if scanning card on the reader is neces of access, sets time-out that triggers after c	
Confirmation	Sets if receptionist confirmation is necessar access, sets time-out that triggers after che	
Allowance type	If set on permission, door opens when user after ok allowance check, if set on preventio when users fails allowance check	
Internet access	· · · ·	
Enable push to server	Enable connection to the cloud server (allow cont periodical push message to server) every 30 second	
Test	Send push message instantly	
Reset	Reset number of sent messages	
Push timer	Shows countdown after which the push message	will be sent
Messages	Number of all sent messages and number of succ messages	essfully sent
Roundtrip	Time it takes the message to get to server and th come back	e response to
Master code	The code which employee has on a card or qr code. code is scanned, red an green light will start flashing code is scanned, then normal cards are scanned and scanned again, all the normal cards will be added to they aren't already on it) and they will be granted L2 code is scanned and then scanned again, all the entr be deleted	If the master master code is the code list (if access. If master
Send LAN code query	If scanned code is not on the code list for that device sent to other devices in the system. If it gets the res device, that the code is on it's list, access is granted	
Process LAN code query	Enable to process code query and send back answer	
LAN query timeout	Set query timeout. If the device that sent query doesn't get answer in set time, it refuses access	
Autodetect	It searches for other controllers in the network and o found controllers. If the other controller is chosen, yo	
Parameters cor	figuration	
Init parameters	Set parameters to the ones saved in permanent mer	mory
Save parameters	Save set configuration to the permanent memory	
Read parameters	Read parameters from the permanent memory and parameters	write them to work

DISPLAY SETTINGS

×

Paramet	ers configu	uration for alphanumeric display
Line 1	j	
Presence		Set text that will be displayed on first line when proximity detector detects someone
Advertisir	ng 01-09	Set text that will be displayed when proximity detector isn't detecting anybody
Advertisir	ng text time	Set timer at which the advertising text changes
Line 2		
Counters		Displays number of people with L1 and with L2 access in the building
Line 3		
Enter		Set the text that will be displayed when person is allowed to enter
Disinfect		Set the text that will be displayed when person has to disinfect hands
Camera		Set the text that will be displayed when person has to look at the camera
Confirm		Set the text that will be displayed when waiting for confirmation to enter
Code		Set the text that will be displayed when person has to scan the code
Occupied		Set the text that will be displayed as long as the limit of people inside is reached
Fever		Set the text that will be displayed if fever is detected
Exit		Set the text that will be displayed if the person has to exit the building
Paramet	ers configu	uration for graphic display
Caption		
Full	Set text tha	at will be displayed if the place is full
Level 2		at will be displayed when the limit of people for L1 access is reached eople with L2 access are allowed to enter
Level 1	Set text tha	at will be displayed if no limit of people is reached
Alarm	Set text tha	at will be displayed if alarm is triggered
Warning	Set text tha	at will be displayed if warning is triggered
Text		
Enter	Set the text	t that will be displayed when person is allowed to enter
Disinfect		
Camera	Set the text that will be displayed when person has to look at the camera	
Confirm	Set the text that will be displayed when waiting for confirmation to enter	
Code	Set the text that will be displayed when person has to scan the code	
Occupied	Set the text reached	t that will be displayed as long as the limit of people inside is
Fever	Set the text that will be displayed if fever is detected	
Exit	Set the text that will be displayed if the person has to exit the building	

From: http://wiki.hiq-home.com/ -

Permanent link: http://wiki.hiq-home.com/doku.php?id=en:3s:configuration&rev=1592982932



Last update: 2020/06/24 07:15