


# HIQ Access configurator


## Codes management

|                            |   |
|----------------------------|---|
| <b>Edit code</b>           | Edited code, click to enter new code  |
| <b>Type</b>                | Edited code type, click to select desired type  |
| <b>Access points AP-ID</b> | Access points rights for edited codes (0=no access, 255=unlimited passages, 1..245= limited passages count, decrements with every passage grant).                             |
| <b>Active on</b>           | Active time for edited code, use arrows to increment/decrement values, click on value to directly enter value or use buttons [ now ] or [ clear ]. Enter all 0 for no expire. |
| <b>Expire on</b>           | Expire time for edited code, use arrows to increment/decrement values, click on value to directly enter value or use buttons [ now ] or [ clear ]. Enter all 0 for no expire. |
| <b>[ now ]</b>             | Set actual date / time for expire.  |
| <b>[ clr ]</b>             | Clear expire (code newer expire).   |
| <b>[ search ]</b>          | Search for edited code in code list.  |
| <b>[ save ]</b>            | Save edited code to list.   |
| <b>[ clear ]</b>           | Clear all edited code fields.   |
| <b>[ delete ]</b>          | Delete edited code from list.   |
| <b>Code list</b>           | Controller codes list. Click on code to edit it.  |

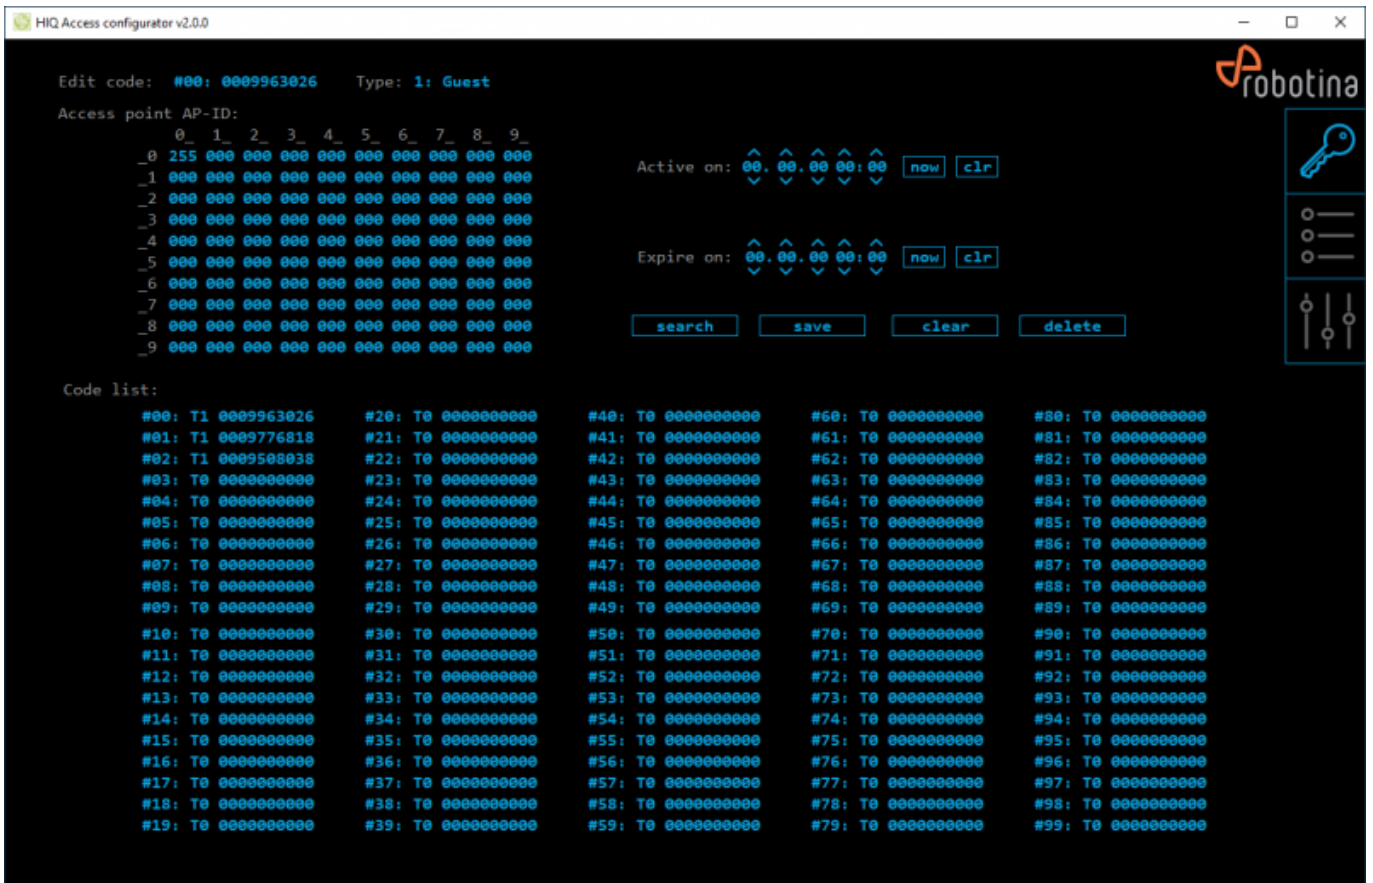

# Access events list


|                   |            |
|-------------------|------------|
| <b>date</b>       | event date |
| <b>time</b>       | event time |
| <b>event</b>      | event code |
| <b>event data</b> | event data |

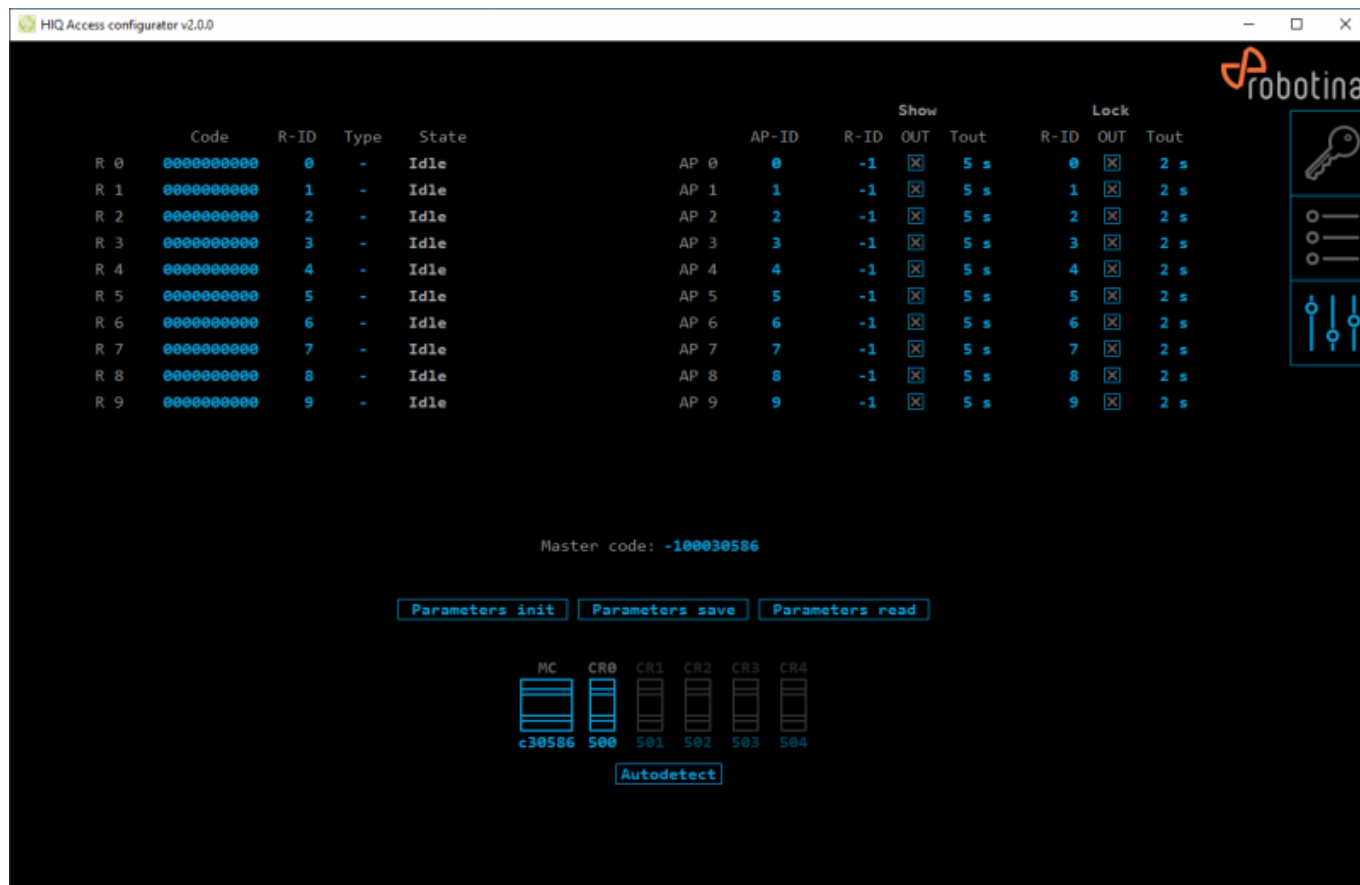

# Access settings

| Code readers settings  |  |
|------------------------|--|
| <b>Code</b>            | Code read by reader, click for manual entry                          |
| <b>R-ID</b>            | Reader ID; link reader to access point ("show" or lock)              |
| <b>Type</b>            | Access point type (- / Master ADD / Master All), click to toggle     |
| <b>State</b>           | State of access point.   |
| Access points settings |  |
| <b>AP-ID</b>           | Access point ID; link to code rights                                 |
| <b>Show: R-ID</b>      | Link to reader ID; link to the reader for signaling the access point |
| <b>Show: OUT</b>       | Show output (click to toggle)  |
| <b>Show: Tout</b>      | Show time-out  |
| <b>Lock: R-ID</b>      | Link to reader ID; link to the reader for unlocking the access point |

|                            |  |
|----------------------------|--|
| <b>Lock: OUT</b>           | Lock output (click to toggle)                          |
| <b>Lock: Tout</b>          | Lock time-out  |
| <b>General settings</b>    |  |
| <b>Master code</b>         | Master code for auxiliary code management              |
| <b>[ Parameters init ]</b> | Click to initialize all parameters to factory defaults |
| <b>[ Parameters save ]</b> | Click to save all parameters to permanent memory       |
| <b>[ Parameters read ]</b> | Click to read all parameters from permanent memory     |
| <b>Access HW modules</b>   | Detected modules are displayed unmasked.               |
| <b>[ Autodetect ]</b>      | Press to find HIQ Access controller in local network.  |

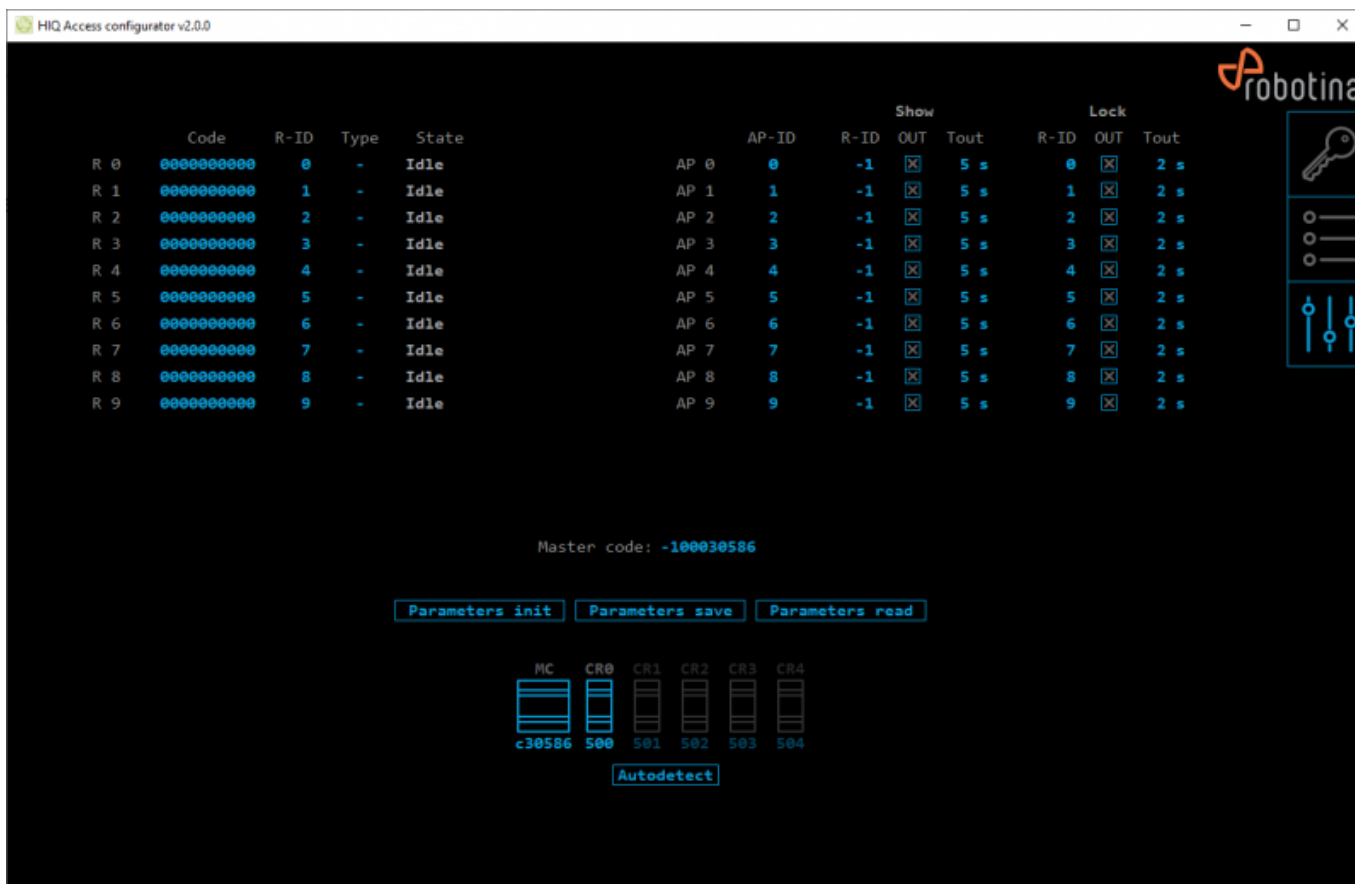

From:  
<http://wiki.hiq-home.com/> -

Permanent link:  
<http://wiki.hiq-home.com/doku.php?id=en:access-iq:configurator&rev=1617873235>

Last update: 2021/04/08 09:13

