


HIQ Access @ Home configurator

The configurator is simplified and adapted for home use:

- 10 access codes (unlimited validity),
- 2 access points (unlimited passage count).

Access codes	Access codes list. Click on check-box to toggle access right.
[add]	Click to add new access code.
[del]	Deletes access code.
Master code	Click to enter new master code.
Lock icon	Access point lock status. Click to toggle.
Timeout	Lock timeout.
[Parameters init]	Click to reset parameters to factory defaults.
[Parameters save]	Click to save parameters to permanent memory.
[Parameters read]	Click to read parameters from permanent memory.
Access events list	Last 20 access events.
[Autodetect]	Click to find access controller in local network.
Modules icons	Modules without error are not masked.

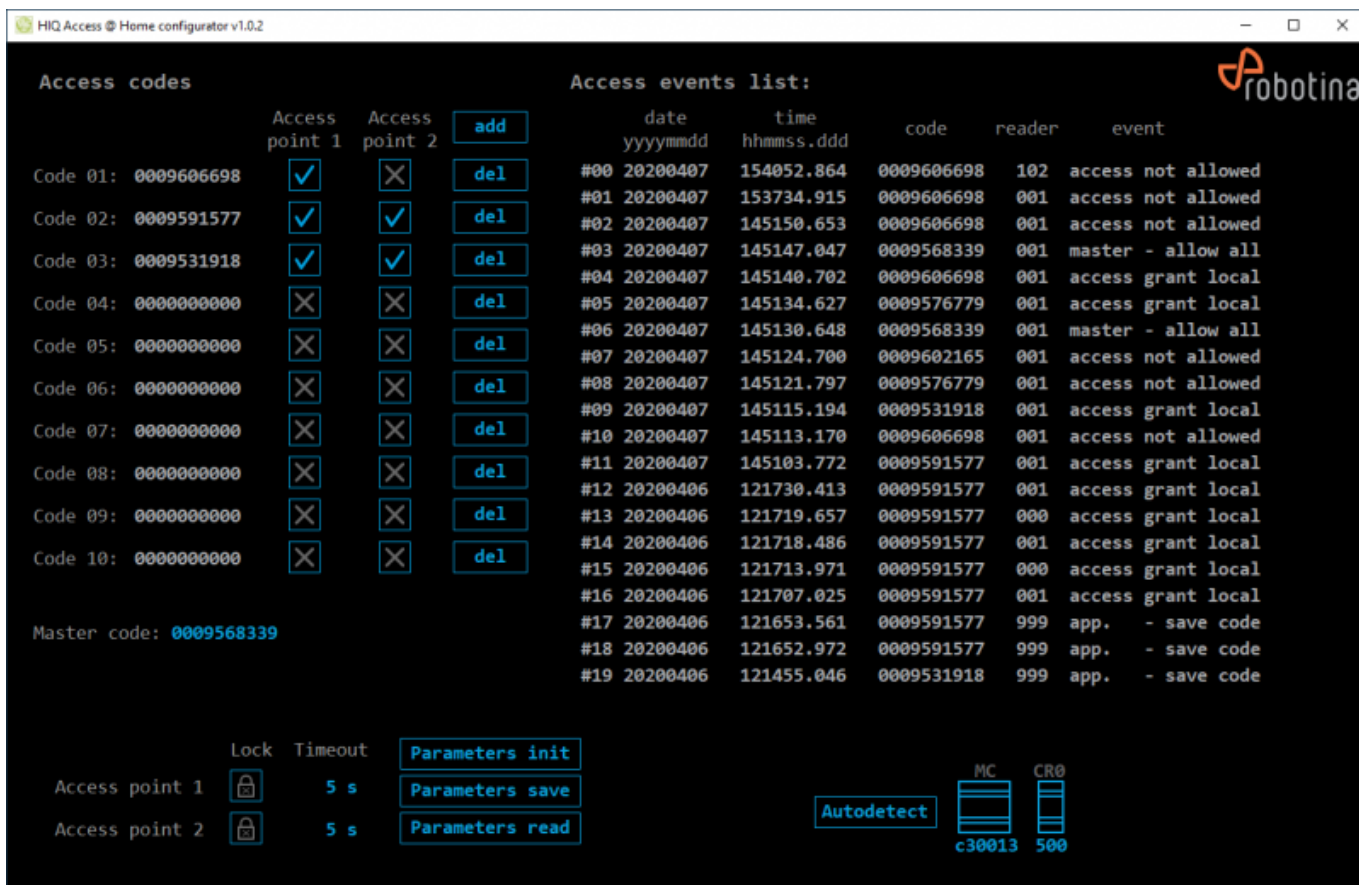

From:

<https://wiki.hiq-universe.com/> -

Permanent link:

https://wiki.hiq-universe.com/doku.php?id=en:access-iq:home_configurator

Last update: **2021/04/08 09:13**

