

# HEMS HW Selection table

## HEMS sets

Name	Code	Description	Contains
HEMS 1P set	<b>HEMS-1P-D-02</b>	HEMS, single phase power sensor and current transformer included	<a href="#">MC-230</a> <a href="#">PM1-E-D-CT</a> <a href="#">CT1-E-50</a>
HEMS 3P set	<b>HEMS-3P-D-02</b>	HEMS, three phase power sensor included	<a href="#">MC-230</a> <a href="#">PM3-I-D</a>

## HEMS devices

Name	Code	Description	Mounting
Home Linker	<a href="#">HL</a>   <a href="#">HEMS ome linker</a>   <a href="#">DIN rail, 6M</a>     <a href="#">HEMS G2 controller</a>   <a href="#">[[en:hems:hardware:mc-230 MC-230</a>	HEMS controller, up to 6 energy sources and 4 managed consumers	DIN rail, 6M
Three-phase power-sensor	<a href="#">PM3-I-D</a>	3-phase power sensor, direct connection	DIN rail, 3M
Single-phase power-sensor	<a href="#">PM1-E-D</a>	1-phase power sensor, direct connection	DIN rail, 1M
Single-phase power-sensor	<a href="#">PM1-E-D-CT</a>	1-phase power sensor, current transformer	DIN rail, 1M
Current transformer	<a href="#">CT1-E-50</a>	Split core current transformer 50A	
Temperature sensor	<a href="#">ES</a>	Digital temperature sensor	

From:  
<http://wiki.hiq-home.com/> -

Permanent link:  
<http://wiki.hiq-home.com/doku.php?id=en:hems:hardware&rev=1562761704>

Last update: **2019/07/10 12:28**

