


Firmware update


CyBroBinLoader software

- Download latest CyBroBinLoader.exe from www.cybrotech.com
- Run CybroBinLoader.exe
- In case Windows OS is blocking execution, click on more info and run anyway

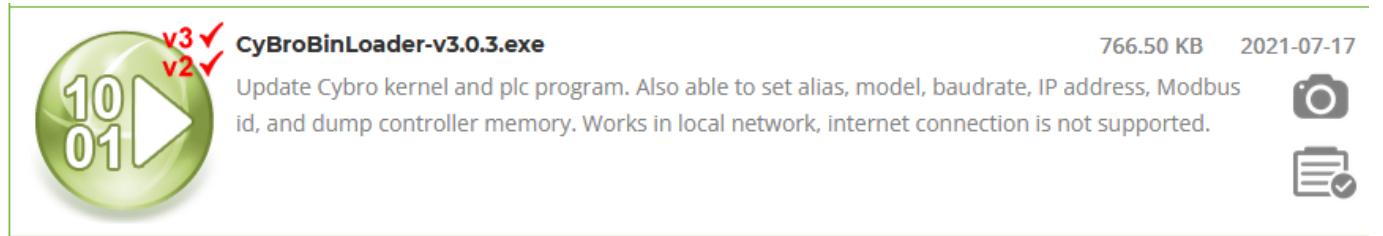

Firmware upload

- Download latest HEMS firmware from: en:hems_v1_2_0:download
- Select correct Cybro NAD (sticker on top of MC controller)
- Select firmware under PLC program
- Enable PLC program and Start PLC
- Click send
-  Do not interrupt during update process

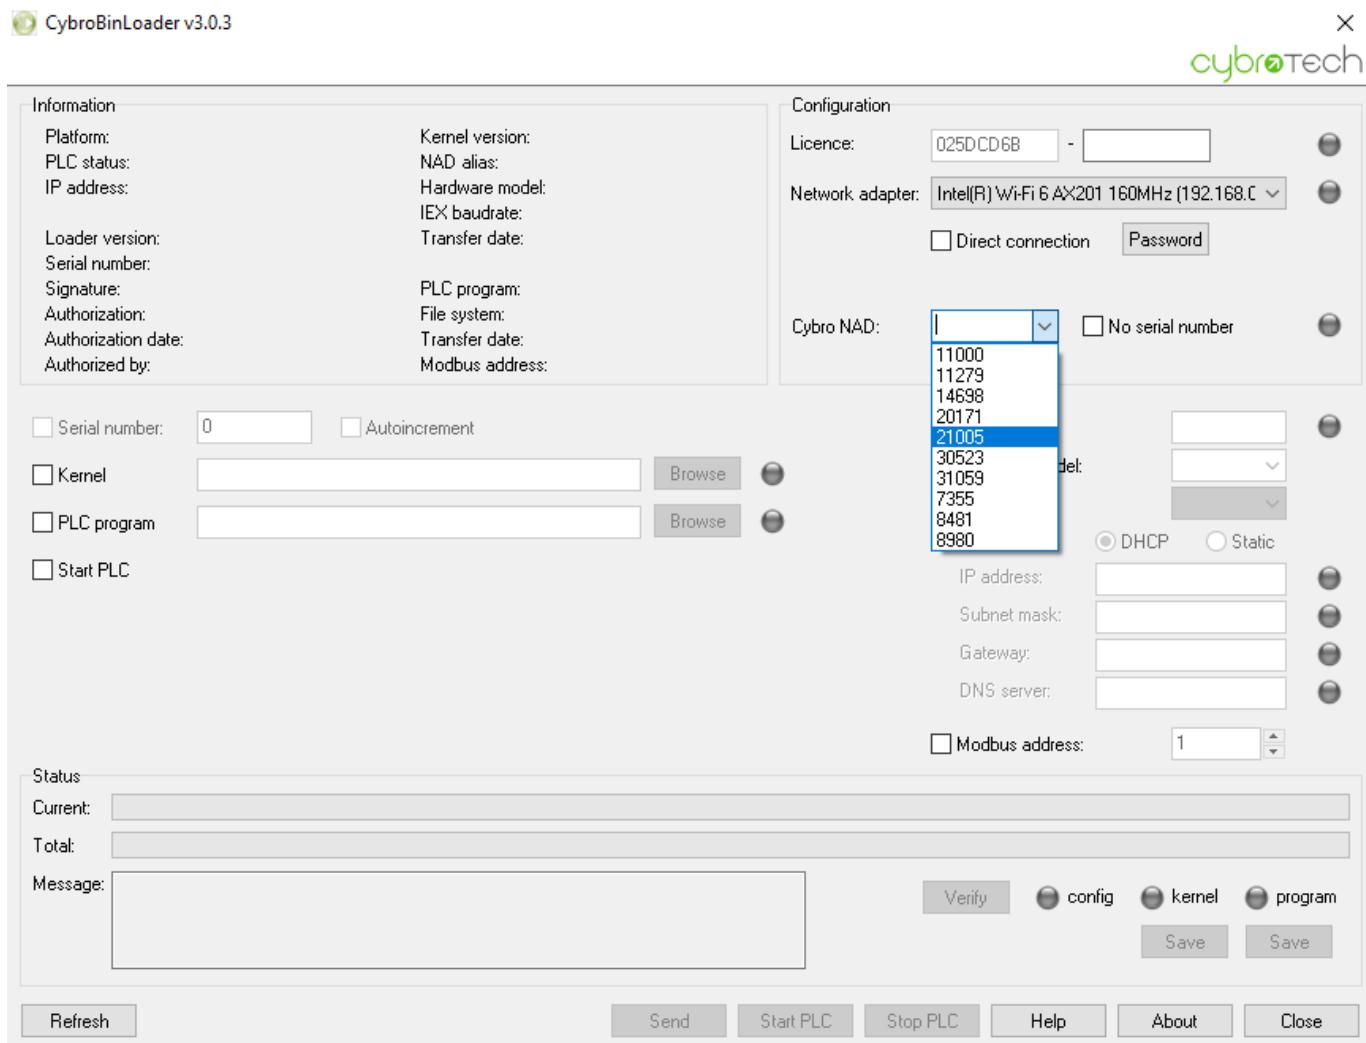

Installation and mounting

-  Carefully open WM-1 module and configure serial communication with jumpers. (Default configuration is 9600bps, 8N1 with normal timeout)
-  Place WM-1 module at least 10cm from other objects. Installation is not recommended inside metal cabinets.
- Connect RS485 terminals to WM-1 RS485 terminals
 - A - A

Last update:
2021/10/28 en:hems_v1_2_0:methods_resources:firmwareupdate http://wiki.hiq-home.com/doku.php?id=en:hems_v1_2_0:methods_resources:firmwareupdate&rev=1635413655
09:34

- B - B
- C - GND
- Connect to 230V power supply
- Configure radio pairing

From:
<http://wiki.hiq-home.com/> -

Permanent link:
http://wiki.hiq-home.com/doku.php?id=en:hems_v1_2_0:methods_resources:firmwareupdate&rev=1635413655

Last update: **2021/10/28 09:34**

