


# HEMS v1.2.0 wiring


## MC-230

Wiring of default configuration.

NOTE: several different configurations can be configured with [HEMS Configurator](#).

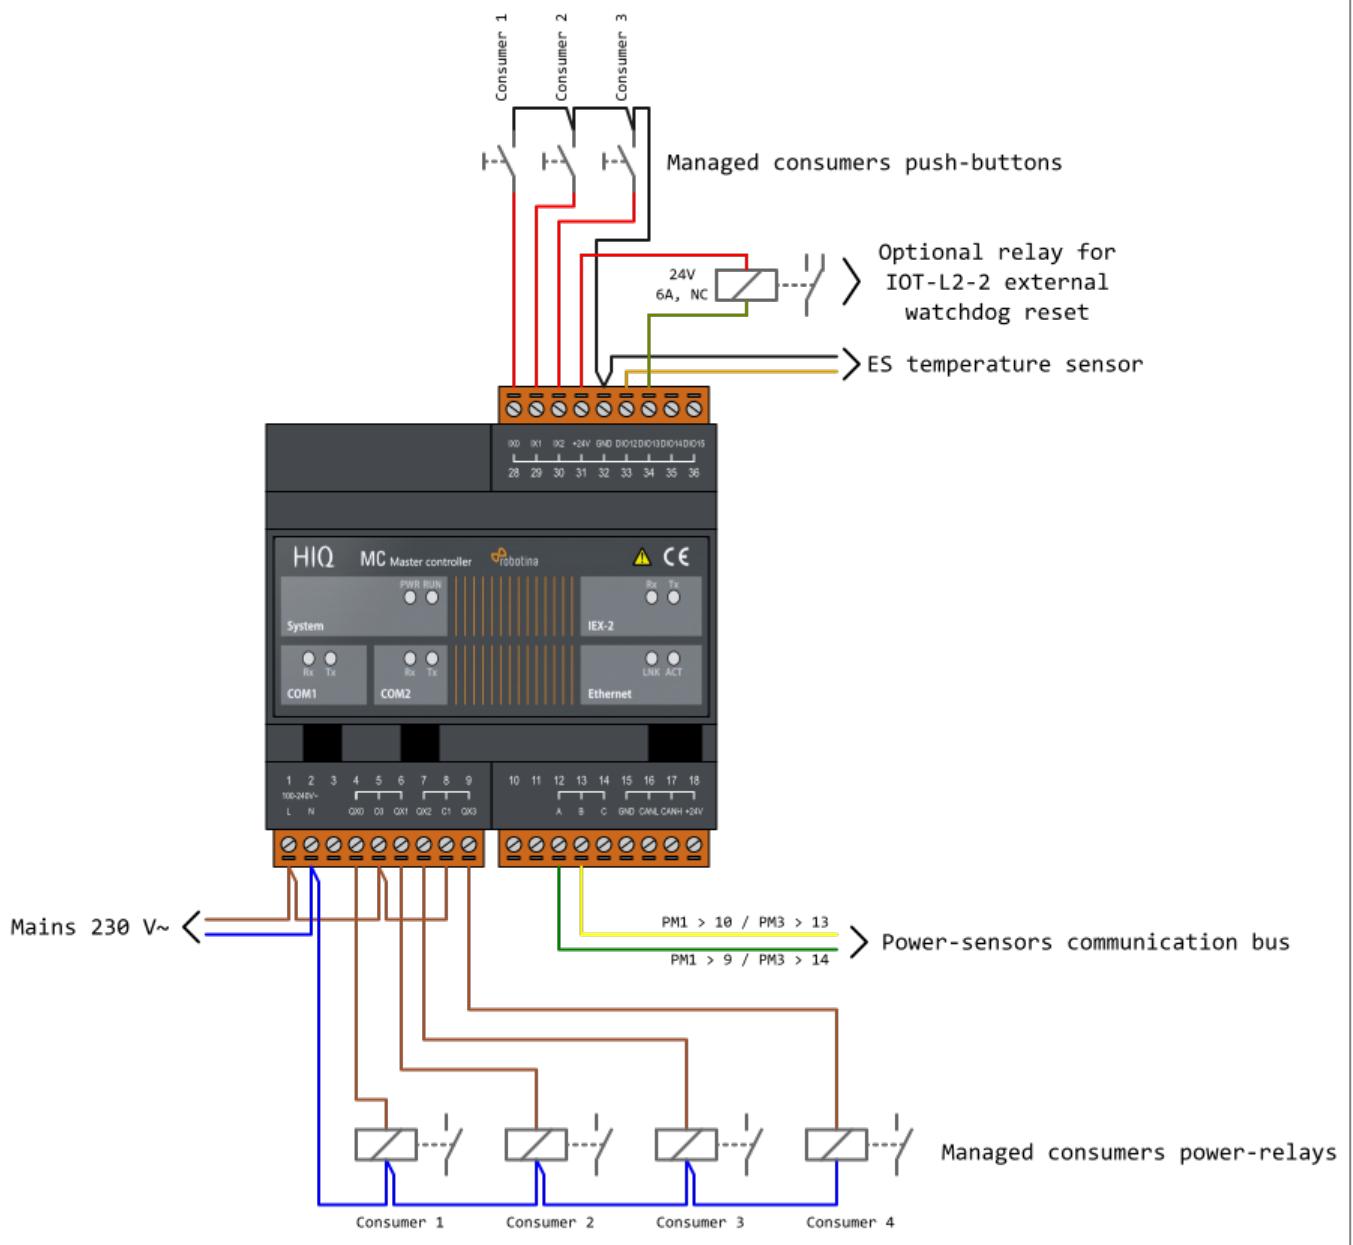


## IOT-L2-2

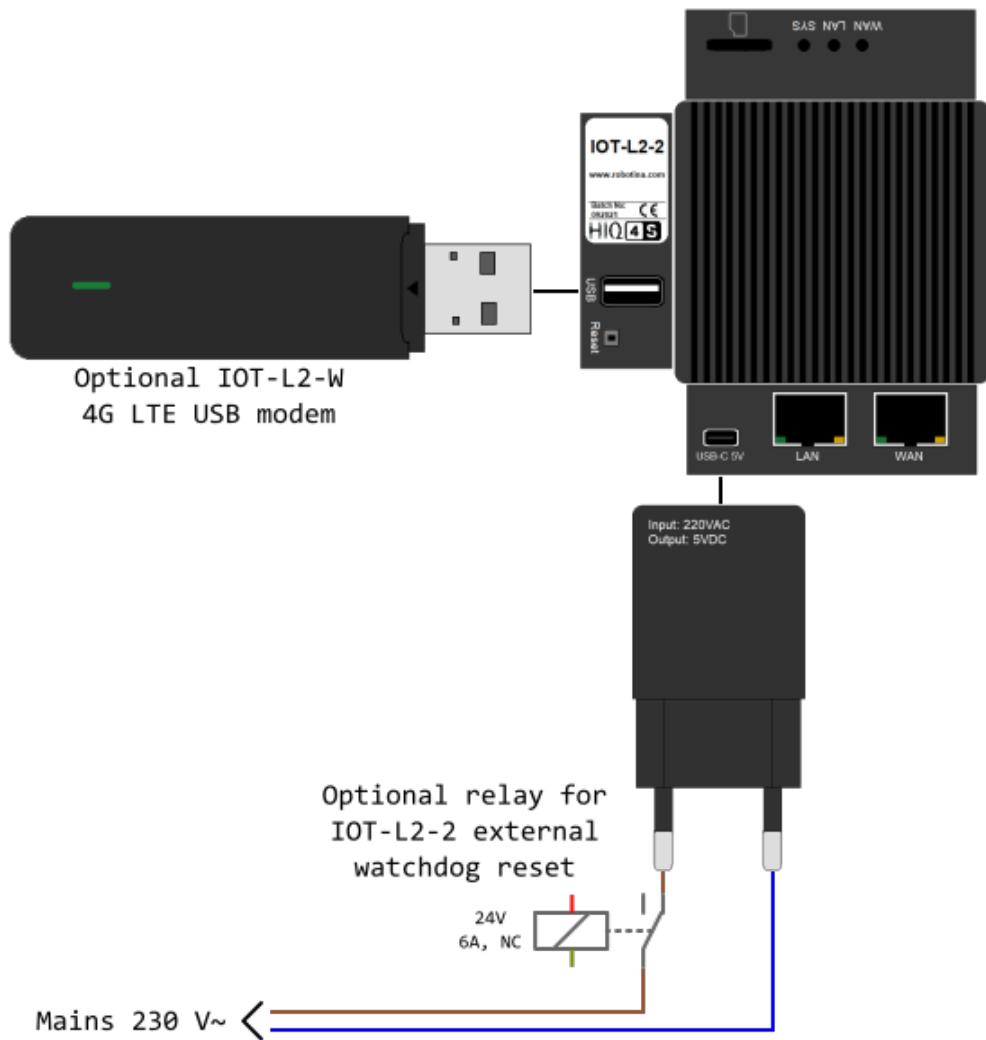


## Network → MC-230, IOT-L2-2 and optionally 4G LTE modem

Default connection to the LAN:

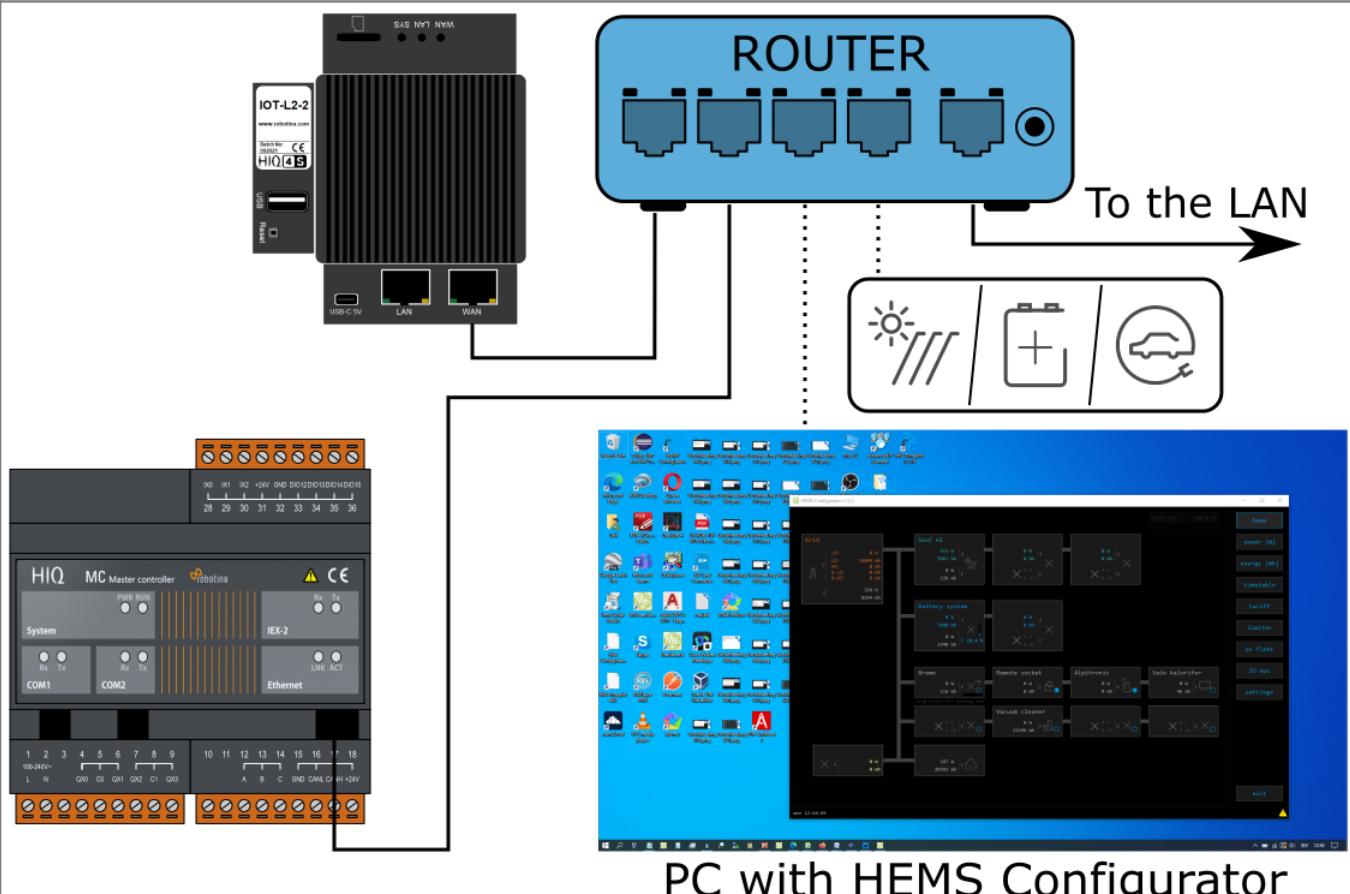



Default connection via 4G modem:

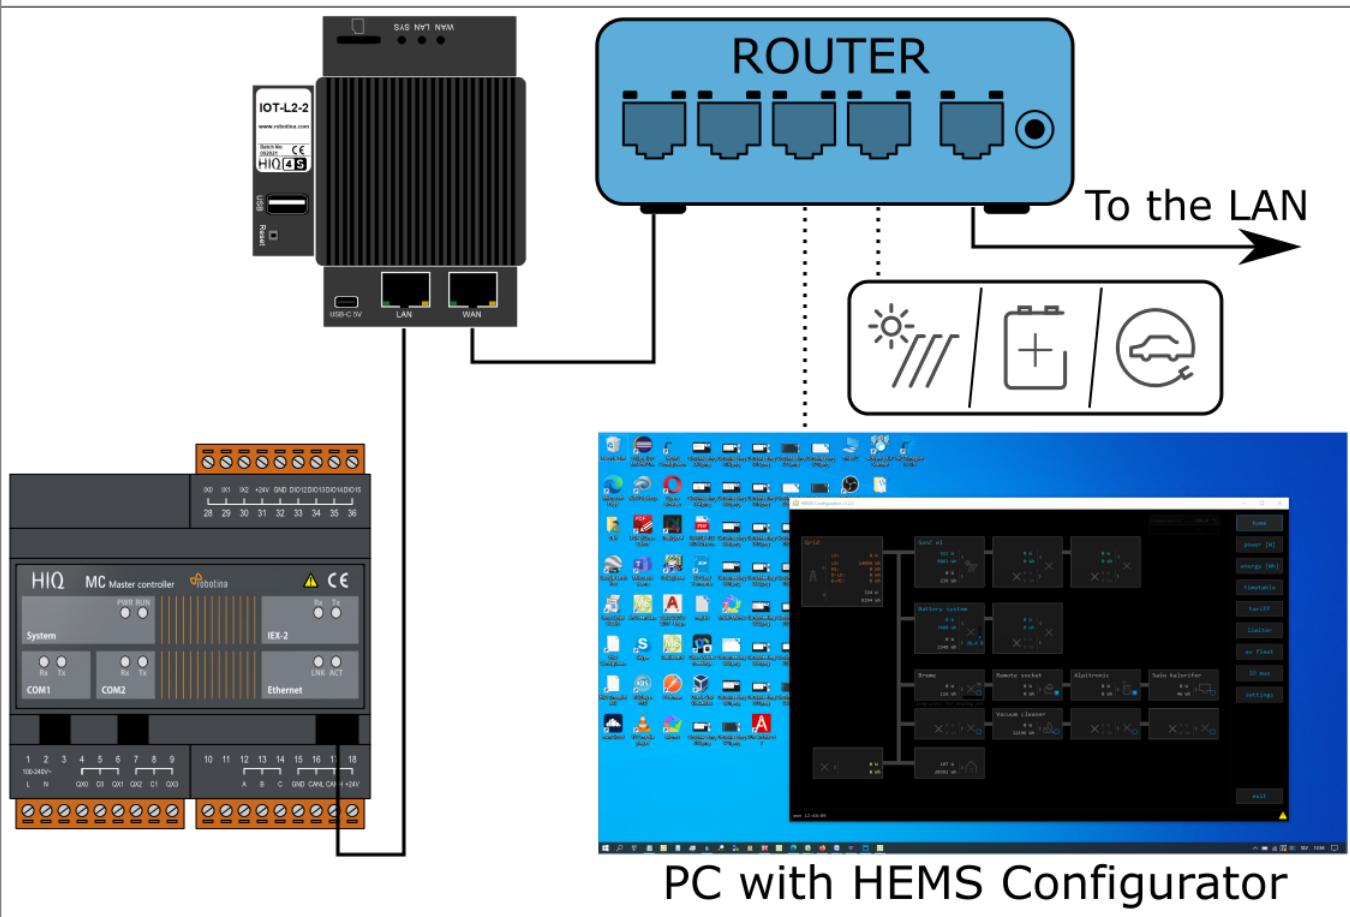


## Optional connection to the LAN:


NOTE: optional connection has to be configured on the cloud service. Please contact support.  
The same applies to specific network requirements, i.e. static IP address.

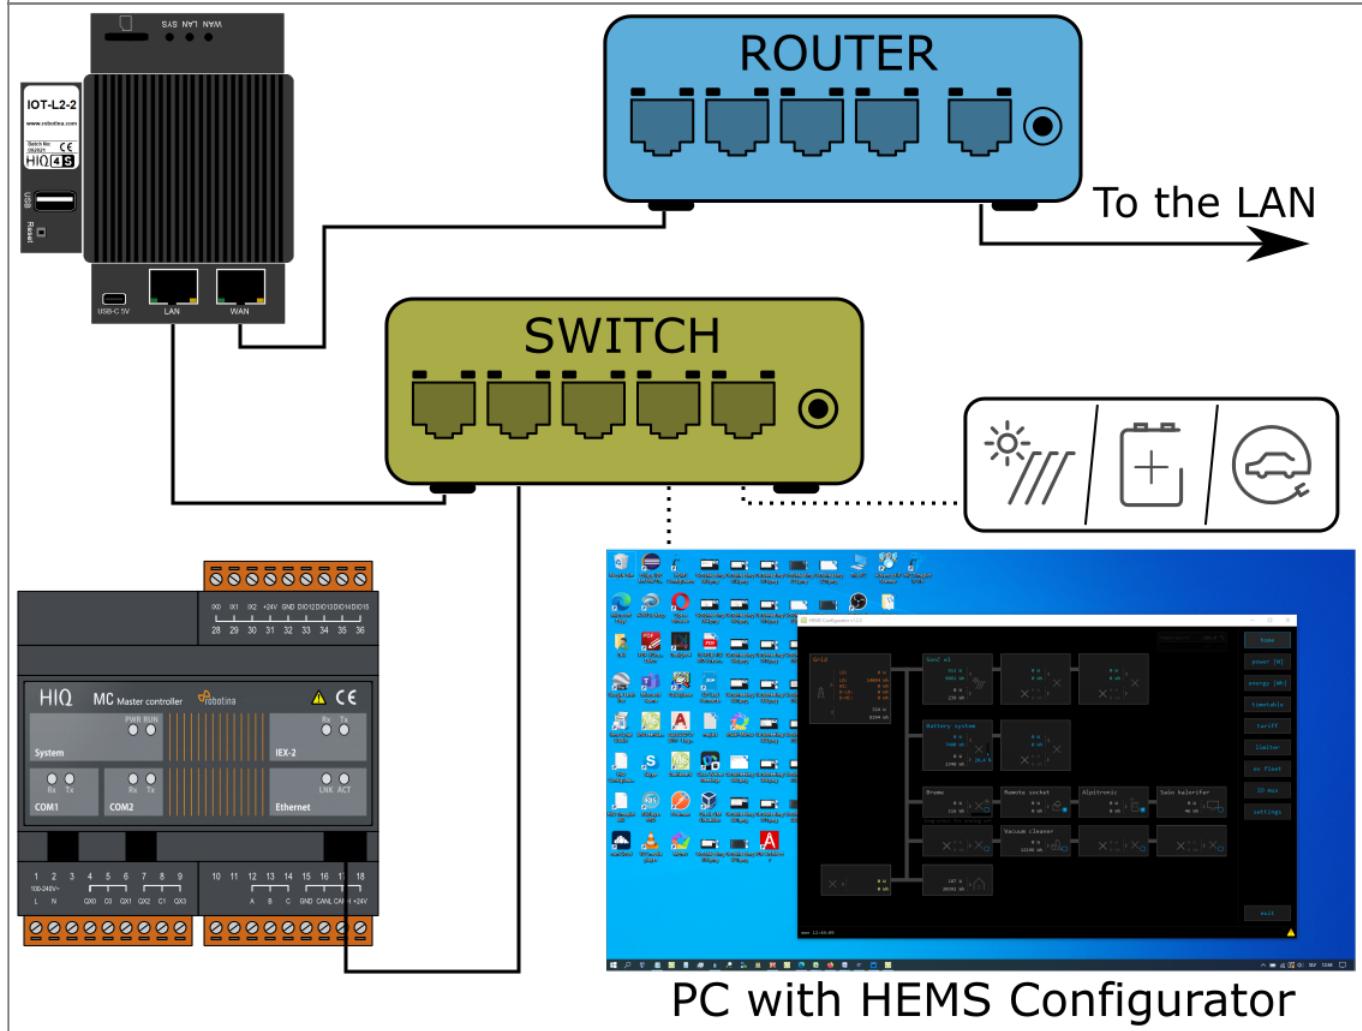

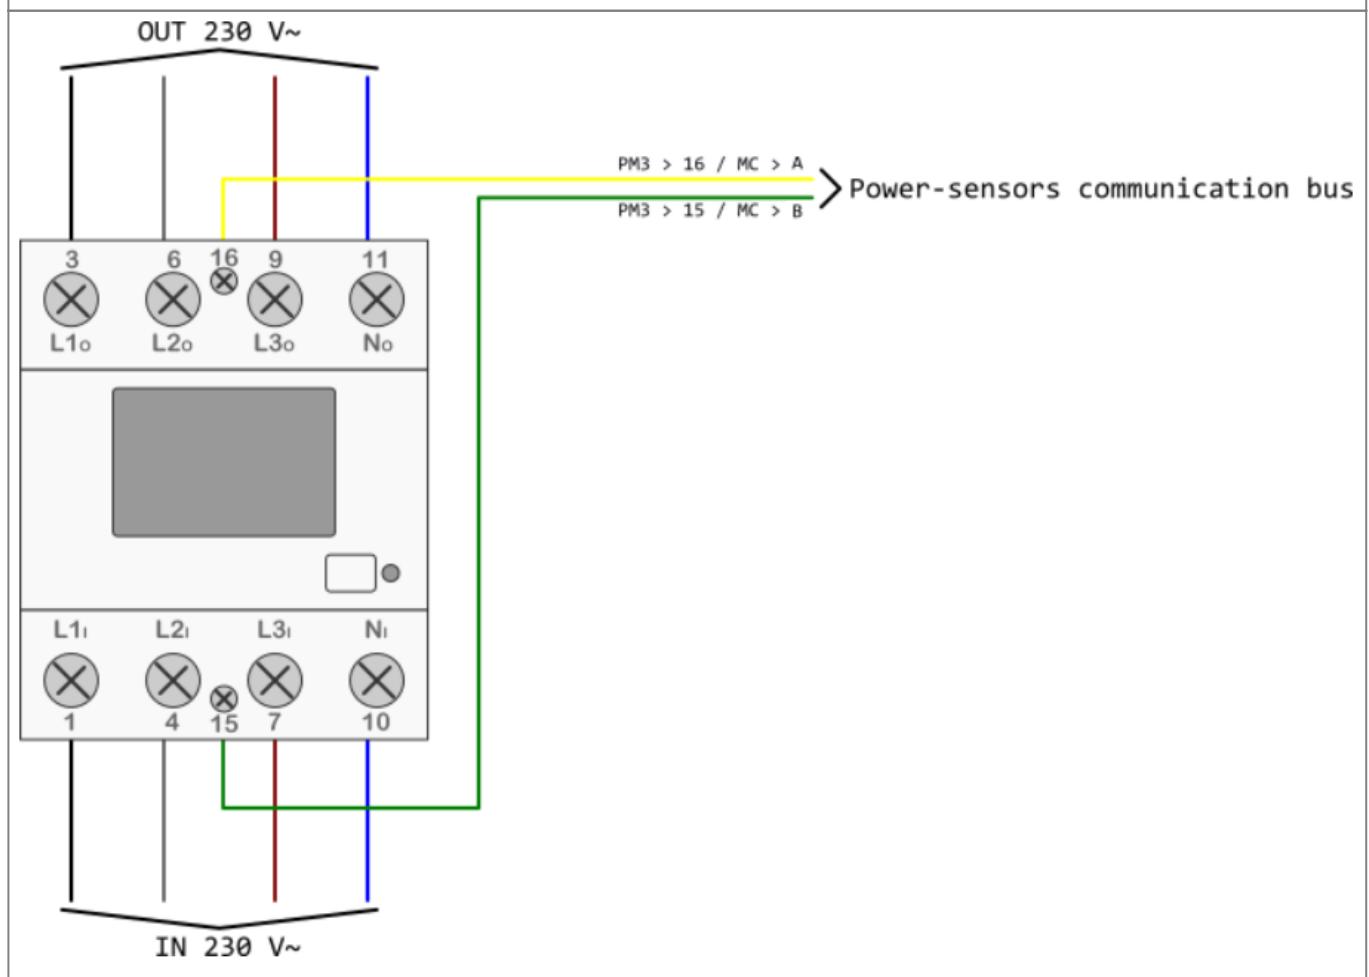
**PM3-I-D**


## PM1-E-D

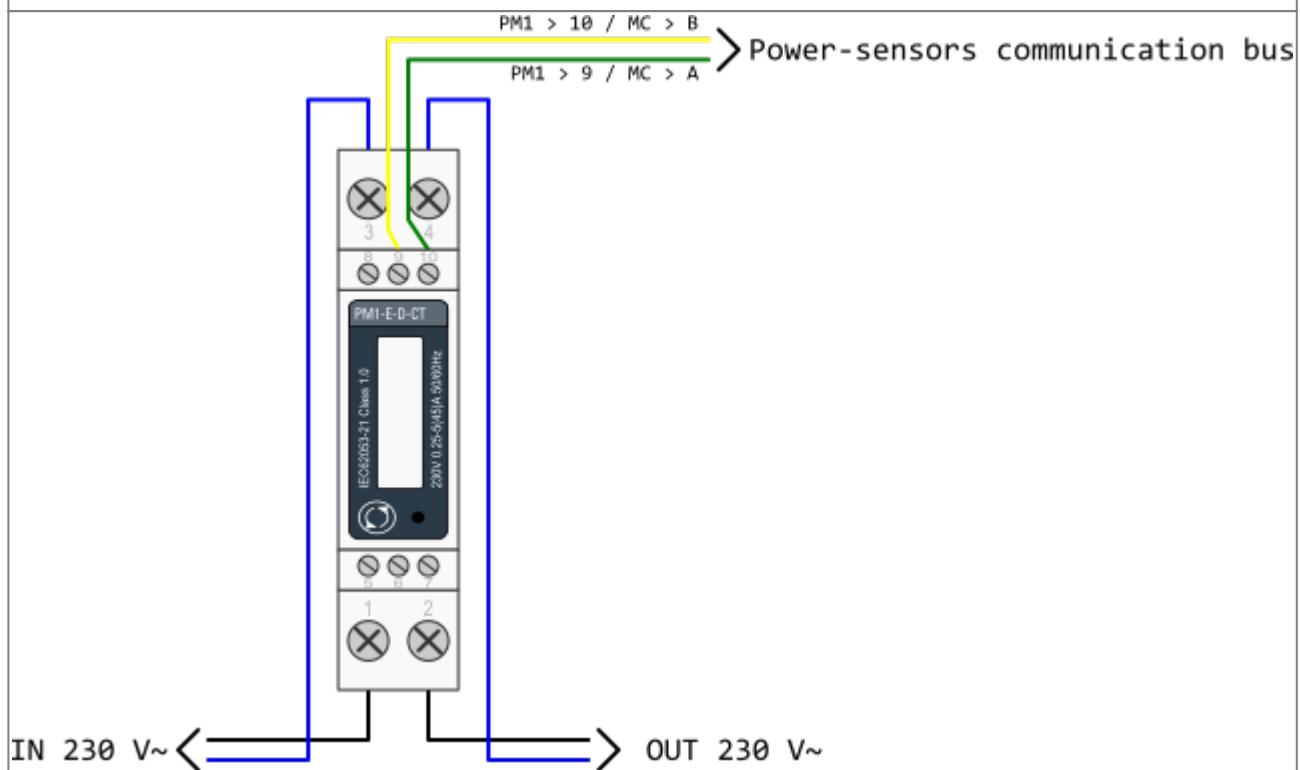

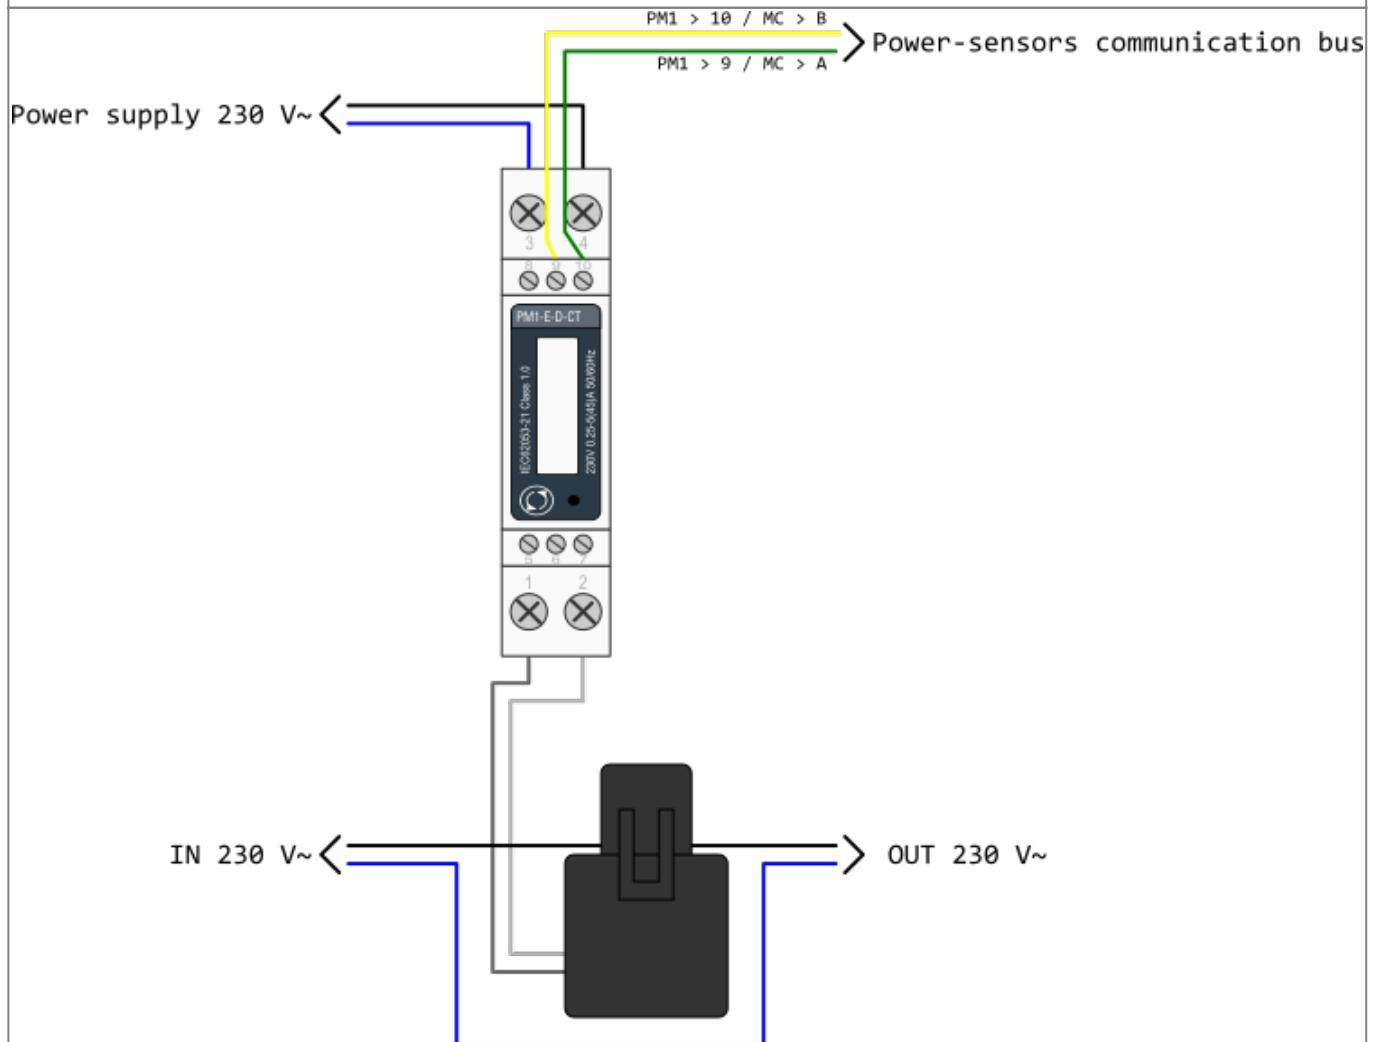**PM1-E-D-CT**

## PM3-E-D-CT

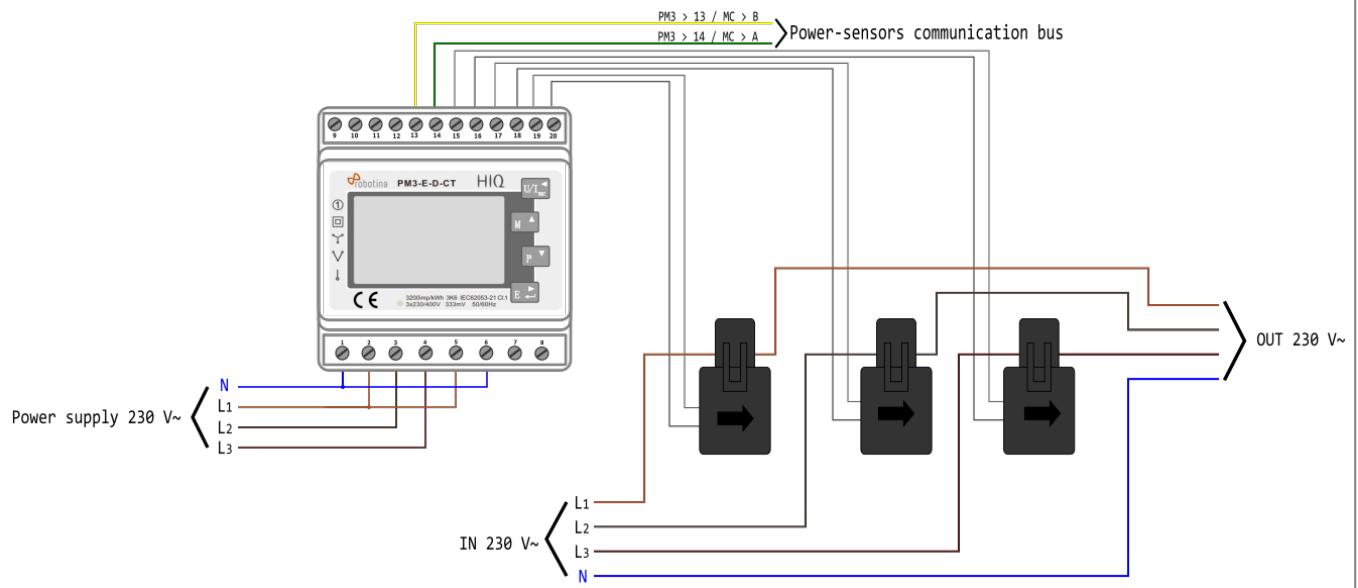

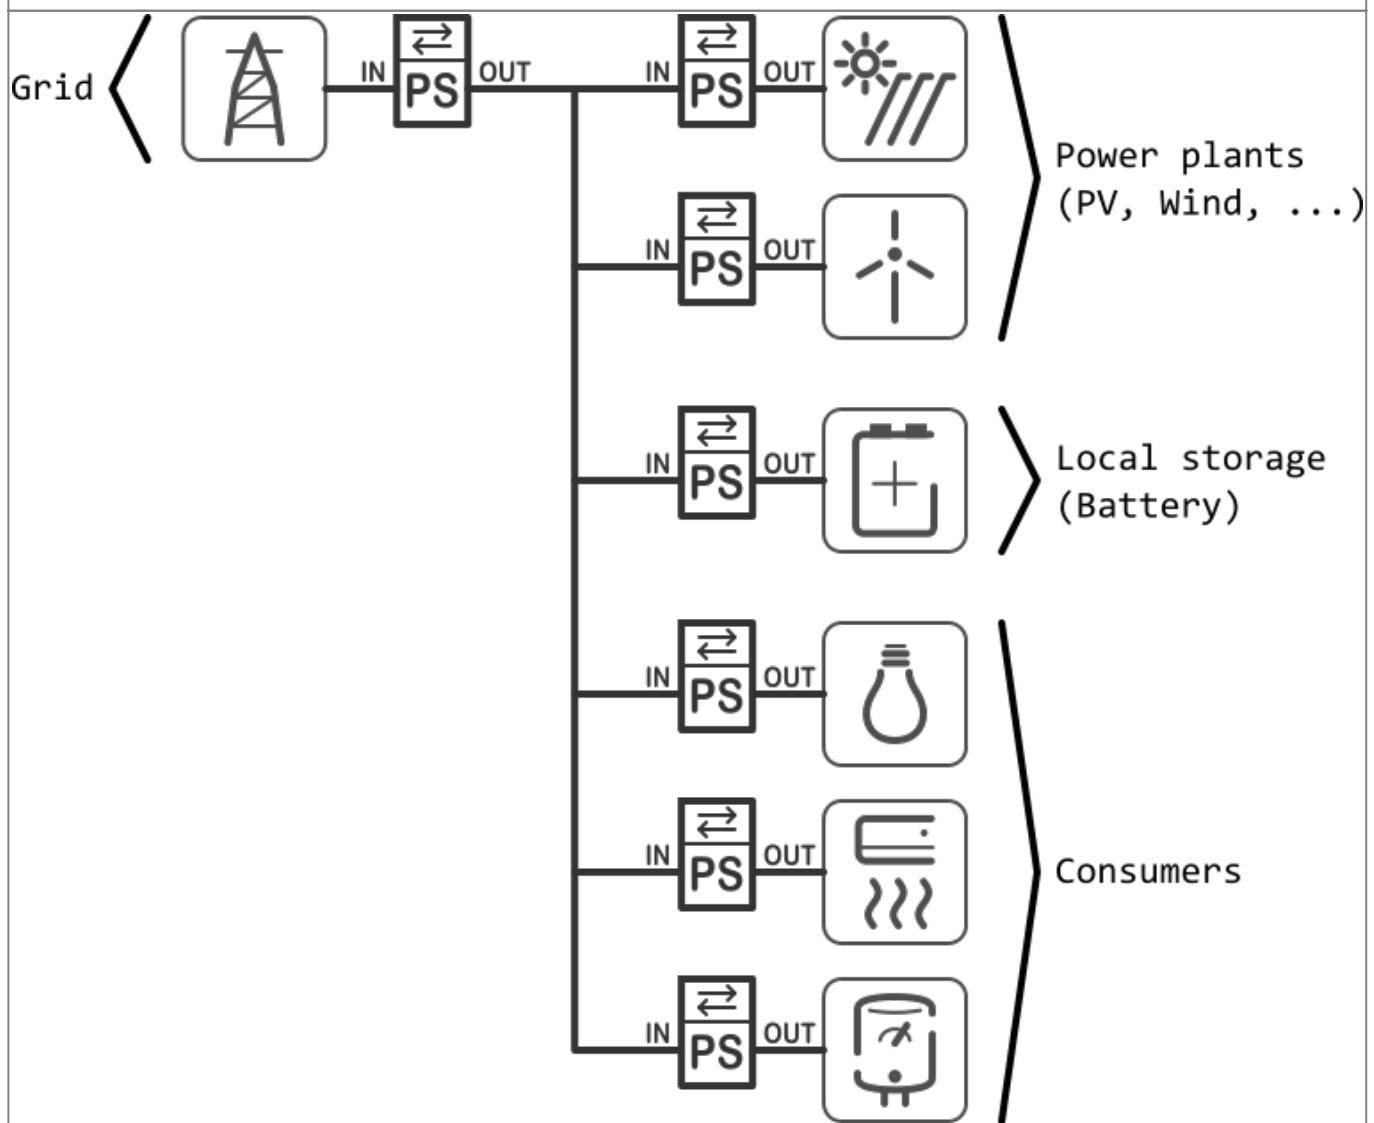**Power-sensors orientation**

From:

<http://wiki.hiq-home.com/> -

Permanent link:

[http://wiki.hiq-home.com/doku.php?id=en:hems\\_v1\\_2\\_0:methods\\_resources:wiring&rev=1632221427](http://wiki.hiq-home.com/doku.php?id=en:hems_v1_2_0:methods_resources:wiring&rev=1632221427)

Last update: 2021/09/21 10:50

