

Push button

1 way		   	Polar white	SM11PW
			Soft black	SM11SB
			Elox silver	SM11ES
			Ivory	SM11IW
1 way with indicator		   	Polar white	SM11PWIN
			Soft black	SM11SBIN
			Elox silver	SM11ESIN
			Ivory	SM11IWIN
up / down		   	Polar white	SM11PWNT10
			Soft black	SM11SBNT10
			Elox silver	SM11ESNT10
			Ivory	SM11IWNT10

From:

<https://wiki.hiq-home.com/> -

Permanent link:

https://wiki.hiq-home.com/doku.php?id=en:hiq_hw:tem-buttons

Last update:

2019/07/25 11:56

