

HIQ Hotel GRMS and BMS software

HIQ Hotel BMS WEB based application which can be hosted on our server and offered as SaaS (software as a service) or on your own server. As it is WEB application there is no need for installation of any additional software on workstation. HIQ Hotel BMS is fully customized to hotel specific needs and budget.

Typical BMS

Overview

Room	Booked	Room pr.	Bath pr.	WLR	DND	Fire alert	Temperature
I	In 01 h	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	R: C B set: 25.0 °C ai: 22.7 °C fi: 28.3 °C
							B: H 0 set: 20.0 °C ai: 24.4 °C fi: 22.1 °C
II	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	R: C B set: 27.0 °C ai: 25.7 °C fi: 24.4 °C
							B: H 0 set: 22.0 °C ai: 27.5 °C fi: 25.4 °C
III	In 01 d	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	S: OFF set: 12.0 °C ai: 29.9 °C
							R: C B set: 18.0 °C ai: 25.2 °C fi: 25.4 °C
IV	In 01 m	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	B: H 0 set: 18.0 °C ai: 29.3 °C fi: 24.6 °C
							R: C B set: 25.0 °C ai: 25.8 °C fi: 22.4 °C
V	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	B: H 0 set: 20.0 °C ai: 27.3 °C fi: 23.6 °C
							R: C B set: 25.5 °C ai: 24.8 °C fi: 23.8 °C
S	-	[Icon]	-	-	-	[Icon]	B: H 0 set: 22.0 °C ai: 25.5 °C fi: 24.3 °C
							R: C B set: 24.5 °C ai: 24.8 °C


Access

The screenshot shows the 'robotina' web interface for 'Access' management. The main content area is titled 'Access' and shows 'Guest access codes' for 'Hotel Theodorika'. A table lists dates from 22.08 to 31.08 and columns for code types I, II, III, IV, and V. Some cells contain numbers like 2322, 1214, 2525, 1651, 1435, 6252, 2244, 1136, 5426, and 3132. On the right, there are buttons for 'create code', 'delete code', 'extend code', and 'clear selection'. The left sidebar contains a navigation menu with categories like 'HIQ', 'Hotel Theodorika', and 'User menu'.


Room

The screenshot shows the 'robotina' web interface for 'Room' control. The main content area is titled 'Room 1' and displays various room status indicators and controls. The controls are organized into several sections: 'Room state' (Not locked, Presence), 'Time to next check in' (08:01 h 52 m), 'Room clean request', 'Do Not Disturb', 'Room presence', 'Bathroom presence', 'Service mode', 'Water heater' (44.4 °C - OFF), 'Refrigerator', 'Bathroom sockets', 'Room sockets', 'Tee kitchen sockets', 'Ventilation', 'Sensa' (19.7 °C - OFF), 'Jacuzzi' (32.2 °C - ON), 'RCB', 'Terrace main', 'Terrace entrance', 'Terrace LED stripe', 'Room main', 'Room standing', 'Reading left', 'Reading right', 'Room LED stripe', 'Smoke sensor', 'Room ambient temperature abs.' (22.7 °C), 'Room ambient temperature rise', 'Room floor temperature abs.' (28.3 °C), 'Room floor temperature rise', 'Bath ambient temperature abs.' (24.4 °C), 'Bath ambient temperature rise', 'Bath floor temperature abs.' (22.1 °C), and 'Bath floor temperature rise'. Each control has a corresponding icon and a 'reset' button.

HVAC

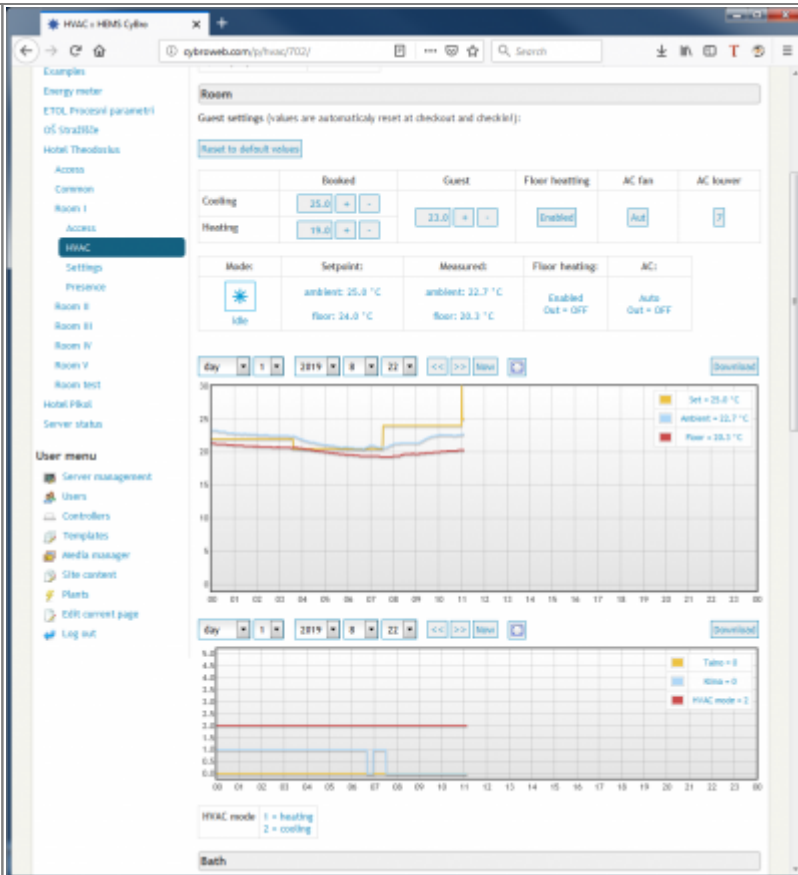

Settings

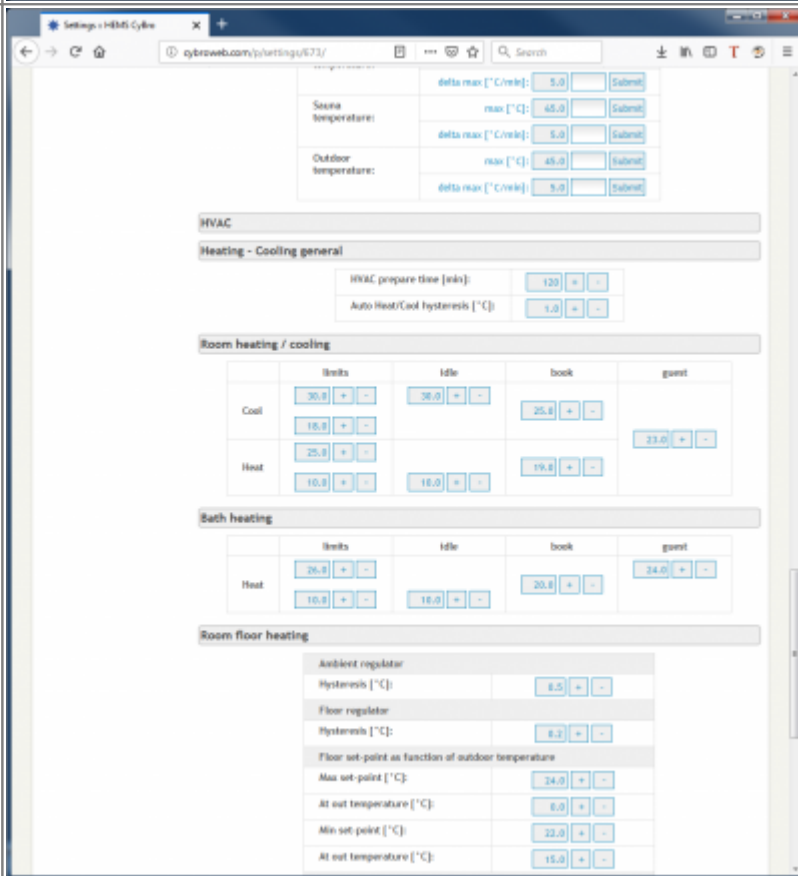

Presence



From: <http://wiki.hiq-home.com/> -

Permanent link: http://wiki.hiq-home.com/doku.php?id=en:hotel:hiq_bms&rev=1586341724

Last update: **2020/04/08 10:28**

