

## PV inverter

Monitoring of PV Inverter is possible by two ways:

1. adding of power-sensor to measure produced electricity. How to add power sensor please see [Power Sensor](#)
2. connecting PV inverter by Modbus TCP to EVSE (only for SolarEdge inverters)

### One-phase sensor PM1-E-D

- **Connect** communication bus (to only one power-sensor)
- In HEMS Configurator power-sensor should appear as a “new device”
- Press and hold the push-button on the power-sensor until it appears **-SEt-** on display
- In HEMS Configurator click on the “ **add**” button next to the source or consumer that the sensor is measuring
- Connect communication bus to the next power-sensor and repeat procedure

From:  
<http://wiki.hiq-home.com/> -

Permanent link:  
[http://wiki.hiq-home.com/doku.php?id=en:robotina\\_charger:commissioning:pv\\_inverter&rev=1670582943](http://wiki.hiq-home.com/doku.php?id=en:robotina_charger:commissioning:pv_inverter&rev=1670582943)

Last update: **2022/12/09 10:49**

