
2025/11/03 00:44 1/1 Power plant connection

## **Power plant connection**

The power plants can be connected to the grid in two ways:

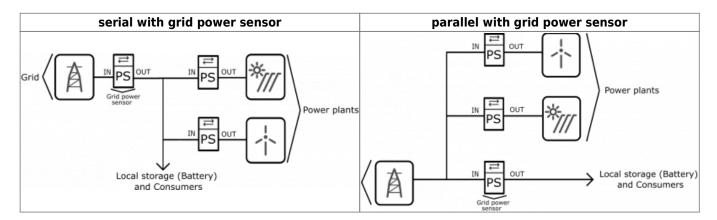

When configuring the power plant, select

- in: serial (internal) with grid power sensor
- ex: parallel (external) with grid power sensor

The power plants are configured as internal by default.

## **PV** inverter

Monitoring of PV Inverter is possible by two ways:

- 1. adding of power-sensor to measure produced electricity. How to add power sensor please see Power Sensor
- 2. connecting PV inverter by Modbus TCP to EVSE (only for SolarEdge inverters)

## **One-phase sensor PM1-E-D**

- **Connect** communication bus (to only one power-sensor)
- In HEMS Configurator power-sensor should appear as a "new device"
- Press and hold the push-button on the power-sensor until it appears -SEt- on display
- In HEMS Configurator click on the " add" button next to the source or consumer that the sensor is measuring
- Connect communication bus to the next power-sensor and repeat procedure

From

http://wiki.hiq-home.com/ -

Permanent link:

Last update: 2022/12/09 10:50

