

# Power plant connection

The power plants can be connected to the grid in two ways:



When configuring the power plant, select

- **in:** serial (**internal**) with grid power sensor
- **ex:** parallel (**external**) with grid power sensor

The power plants are configured as internal by default.

## PV inverter

Obtaining relevant data from photovoltaic is possible by two ways:

1. adding power-sensor to measure produced electricity by PV (no connection to interver). How to add power sensor please see [Power Sensor](#)
2. connecting PV inverter by Modbus TCP to EVSE (only for SolarEdge inverters)

 
## SolarEdge inverter over Modbus TCP



To setup Modbus TCP on Inverter using SetApp:

- Select Site Communication menu
  - RS485-1 → Protocol → SunSpec (Non-SE Logger)
  - RS485-1 → Device ID, and enter the number 1.
  - Select Modbus TCP and set to Enable.
  - To modify the \*TCP port, select Port, set the port number to 502.

\*TCP port is 1502 by default.



Last update: 2022/12/09 12:16 en:robotina\_charger:commissioning:pv\_inverter [http://wiki.hiq-home.com/doku.php?id=en:robotina\\_charger:commissioning:pv\\_inverter&rev=1670588163](http://wiki.hiq-home.com/doku.php?id=en:robotina_charger:commissioning:pv_inverter&rev=1670588163)

From: <http://wiki.hiq-home.com/> -

Permanent link: [http://wiki.hiq-home.com/doku.php?id=en:robotina\\_charger:commissioning:pv\\_inverter&rev=1670588163](http://wiki.hiq-home.com/doku.php?id=en:robotina_charger:commissioning:pv_inverter&rev=1670588163)

Last update: **2022/12/09 12:16**

