2025/11/03 23:22 1/13 software

EVSE - Robotina Charger v2.0.1

Latest version of Robotina Charger (EVSE) can be found under download map.

EVSE overview

Note: Blue color presents editable value, white color values are not editable.



1. EVSE Name				
Name of EVSE				
2. Limiter sign				
<u>.</u> A	Yellow status when limiter is enabled and active. Green status when enabled and not active. None if limiter is not set.			
3. Data from ongoing chargi	ng session			
EV charging icon with LED light	Different LED light colour is presenting charger state, while icon is as button. Short press for enabling/disabling EVSE, long press for priority charging and error delete.			
State	EVSE status: Communication error, Unknown, Available, EV not connected, Starting, Charging, EV paused, EVSE paused, EV not connected, Charging ended, Charging fault, Unpausing, Unavailable, No EVSE response, Locked, Stopping.			
Phases - number of used phases while charging	3 phases, Phase L1, Phase L2, Phase L3, Unknown phase, 2 phases.			
Power	Charging power of EV.			
EVSE max	Charging current by phase.			
Max current	Allowed max charging current.			
Last session	Time - duration of charging session, Energy - consumed energy of charging session.			
4. error message(s)				
5. EVSE settings				
Priority charging	Utilize all available power to charge as fast as possible ignoring economy charging.			
Locked	Disable unauthorized use of EVSE, authorization is possible with RFID tags or by cloud application.			
Allow charging with ventilation	Allow/deny charging if EV requests ventilation.			
Disable button	Disable functionality of button on housing.			
Turn LED off after 3 minutes of inactivity	LED light is turned off after 3 minutes.			

⁻ http://wiki.hiq-home.com/

Economy charging	Use current: set desired current for charging. Charge only at LO tarriff: charging possible at low tariff only. Note: LO tarriff must be set. Charge with surplus energy: Off; Total - dynamically charge EV and try to keep total power on grid power sensor close to zero; Only from surplus - charges only if there is surplus energy on all phases; All surplus - charge EV with if surplus is available	
EVSE works as slave	EVSE is a slave to master (Modbus TCP communication) EVSE with its serial number-SN. Green tick if communication is OK, red X for lost communication.	
Limit if connection with master is lost	In case of lost communication, use max charging current.	
6. Event log		
Shows last 10 charging session.		
7. RFID and QR		
Add or delete RFID tag or QR co	de, for managing authorized access to EVSE.	
8. Time & date and SW vers	ion	
Time and date with software version release.		
9. configurator		
Runs Configurator		
10. autodetect		
Click to find EVSE in local netwo	ork	

Error table

Robotina charger recovers error automatically. To delete error by yourself long press button on charger housing or on application. **Charging is stopped while error is active. If red light still flashes, please read table bellow.**

Error	Possible causes	Possible solution
CP positive voltage CP negative voltage	Measured voltage on CP pin is out of range.	Check your charging cable and plug. Reconnect your EV.
RCD sensor trip	DC current leak detected.	Please contact an authorized car service department.
RCD sensor malfunction	RCD sensor is damaged or not connected.	Please contact the service department of your EVSE supplier.
Undervoltage Overvoltage	Supply voltage is out of range.	Please contact EVSE installer.
Charge with ventilation	EV requests "Charging with ventilation" and "Charging with ventilation" is not enabled on EVSE	Enable "Allow charging with ventilation" if charged EV is located in ventilated area.
PS reading error	No communication with internal power sensor.	Please contact the service department of your EVSE supplier.
Current is higher than allowed	Vehicle draws more power than allowed.	Please try to charge another EV, if error still appears, please contact the service department of your EVSE supplier. Otherwise, please contact an authorized car service department.

2025/11/03 23:22 3/13 software

Error	Possible causes	Possible solution
Internal temperature is too high		Make sure charger is not exposed to direct sunlight. Please contact charging station installer.

HEMS v2.0.1 Configurator

home

Basic system overview.



1. Grid				
>	From grid	Tariff (LO, HI, D-LO, D-HI) and power from grid in W		
,		Imported energy by tariff in Wh		
<	To grid	Power exported to grid in W		
`	To grid	Exported energy in Wh		
2. Plants				
<	Produced	Produced power in W and energy in Wh		
>	Consumed	Consumed power in W and energy in Wh		
3. Storage syst	ems			
<	Sourced	Power in W and energy in Wh sourced from storage (battery)		
>	Stored	Power in W and energy in Wh stored (to battery)		
bargraph and %¹	soc	Battery State Of Charge		
4. Consumers				
>	Consumed	Consumed power in W and energy in Wh		
[]	Status	Output status for managed consumers		
click	Toggle	Click in frame toggles managed consumers output		
5. Unknown sou	irce			
>	Sourced	Power in W and energy in Wh from unknown source		
!	Accumulate	also all differences caused by power sensor inaccuracy		
6. Other consur	mers			
>	Consumed	Consumed power in W and energy in Wh by other (not measured) consumers		
7. Page navigat	tion			
	home	Home screen		
	power [W]	Power screen		
	energy [Wh]	Energy screen		
	timetable	Timetable screen		
	tariff	Tariff screen		
	limiter	Limiterscreen		

⁻ http://wiki.hiq-home.com/

	ev fleet	EV fleet screen	
	IO mux	IO mux screen	
	settings	Settings screen	
8. Exit			
	exit	Close appliction	

 $^{^{\}scriptscriptstyle 1}$ only for eStore

2025/11/03 23:22 5/13 software

power

Overview of current power distribution by source / consumer.



1. Sourced power Sourced power for each source Sums per source type Total of all sourced power 2. Consumed power Power for each consumer 3. Power distribution Partial distributed power 4. Submeter (Green outline)

Power meter is not part of internal circuit

×

1. Sourced power distribution

How sourced power is consumed by each consumer

2. Consumed power distribution

Who sources consumed power

energy

Energy overview of a given time distributed by sources / consumers.



1. Sourced energy
Sourced energy for each source
Sums per source type
Total of all sourced energy
2. Consumed energy
Energy for each consumer
3. Energy distribution
Partial distributed energy
4. Submeter (Green outline)
Power meter is not part of internal circuit
5. Energy since
Date and time since energy is recorded
6. Reset all
Long-press to reset all energy counters

2025/11/03 23:22 7/13 software

timetable

Weekly timetable for managed consumers.



1. Managed load menu

Switch between managed loads

2. Enable checkbox

When un-checked timetable is not executed

3. Events grid

Events displayed in weekly grid (15 min resolution)

Click to select time and set event by clicking buttons below

4. Once actions (top priority timetable actions)

Actions are executed and then automatically cleared.

"Disable" action will just disable recurring action.

5. Recurring actions (low priority actions)

Actions are executed each week.

6. Cloud optimization

When enabled (checked) cloud optimization is enabled.

tariff

Weekly tariff timetable for grid energy per tariff distribution.



1. Tariff grid

Graphical weekly timetable with tariffs.

Click to select term, click-and-drag to select multiple terms.

2. Low tariff dates

Set low tariff dates for holidays.

3. Low tariff

Set low tariff for selected terms.

4. High tariff

Set high tariff for selected terms.

2025/11/03 23:22 9/13 software

lo tariff dates

Holiday dates when tariff is low



1. Date table

Up to 24 days when tariff is low on holiday

2. Use easter mondays

Use preprogrammed roman-catholic easter monday holidays

limiter

Overview and configuration of limiter



1. Grid Current limit			
MAX current limit	Current limit threshold for main grid fuse		
Enable cluster slave connection	Current limit threshold if charger lost connection with master		
Enable limiting from cloud	Current limit threshold if charger lost connection with cloud		
2. Consumer management			
Turn consumers on or off			
3. Power			
Total power and power for each ph	ase		
4. Current			
Current for each phase			
5. Voltage			
Voltage for each phase			
6. Phase order			
	id power sensor and then set for other power sensors/devices. will NOT apply to phase order of other connected devices!		
7. Status and priority			
<u>.</u> A	Yellow status when limiter is enabled and active. Green status when enabled and not active		
Priority	Device priority group (no limiter, limit last, limit second, limit first)		
8. Grid frequency			
Grid frequency measured on grid p	ower meter sensor		

ev fleet

Overview and configuration of EVSE station. Up to 7 external EVSE supported.



1. EVSE - Robotina Charger

Robotina charger

2. Other EVSE (charging station) linked to Robotina charger

EVSE could have up to 7 charging stations directly connected and related settings are as above.

io mux

Overview and configuration of input/output ports IO mux

2025/11/03 23:22 11/13 software



1. Wireless relay WR-1 output function

On left side are WR-1 modules WR-1 (max 8) with corresponding status (active + communication status). To each WR-1 could be assigned HEMS function (e.g. digital, linker reset, router reset, heat pump channel etc) with output mode (normal or inverted).

2. HEMS input and output function (wired connection) - not for EVSE available

In column on the left side are MC controller (MC-230) ports to which could be assigned MC-230 functions (digital, linker reset, router reset, etc) with output mode (normal or inverted).

Default settings are for e.g. $QXO \rightarrow digital \ 1$ while digital 1 is defined for consumer 1 (settings page). It could be changed in a way to define new function role to QXO port e.g. for linker reset

If it is selected Enable consumer at input IX0,IX1 or IX2 it means that dedicated consumer will be managed (ON/OFF) by input signal on IX0,IX1 or IX2. For example, thermostat signal is wired to IXO port and via IO mux defined "Enable consumer 1" to IX0. While thermostat is active, it is consumer 1 active as well and vice versa.

Limitations: one temperature sensor is allowed, one consumer could be managed by one input only

3. Heat pump supported operation mode

To control Heat pump by EVSE, define supported operation(control) mode based on heat pump specification. E.g. SGRHP supports external control by two channels (Off, Normal, Increased and Increased + additional heater) thus select them in table to enable functionality.

Note: Before selecting modes, heat pump must be defined in setting page!

4. Slave device IP address

For device (PV inverter or external EVSE) define its IP address.

settings



1. System settings			
[autodetect]		Click to find EVSE in local network.	
	c	eStore serial number (automatically detected or can be entered manually).	
eStore	[] enable	When selected EVSE will obtain necessary data (power, voltage) directly from battery storage system, no need to additional power sensor.	
	[detect]	eStore address is cleared and new eStore can be detected.	
	c	HIQ Home serial number (automatically detected or can be entered manually).	
HIQ Home	[] enable	When checked HEMS will read Grid power and energy from HIQ Home (so there is no need to duplicate powersensor).	
	[detect]	HIQ Home address is cleared so new can be detected.	
Virtual grid PS	[] enable	Select if system is without main grid power meter. Energy, power and currents are calculated from other power meters.	
Internal temperature	Temperature inside of EVSE		
Modbus (wired) cycle time	Cumulative reading time of all wired power sensor in ms		
Modbus (wireless) cycle time	Cumulative reading time of all wireless connected power sensor in ms		
Modbus (TCP) cycle time	Cumulative reading time of all TCP connected devices in ms		
IP address	IP address of EVSE		
DHCP	Select for DHCP to obtain an IP address automatically \rightarrow apply and save to confirm.		
Static IP	Set static IP to EVSE → apply and save to confirm.		
Note: If IP settings are failed,	restart EV	SE with jumper between IX1-GND to DHCP	
2. Sources and Consumers	settings	table	
SOURCES	Source name		
icon	Source ic	on	
3. Device status			
Status	Status OK, Warning, Error, Detected		
4. Device message			
source and consumer		consumer power sensor management	
management	message	Messages related to source or consumer power sensor	
5. Device configuration			
	add	Associate new power sensor to source or consumer	
Configuration	del	Disassociate power sensor from source or consumer & configure it as new power-sensor	
6. Device type			
meter	Source or	consumer power-sensor type	
		Power plant connection ¹	

2025/11/03 23:22 13/13 software

7. Submeter option			
sub	Check if this power meter or device is not part of internal circuit. Energy division for this device is ignored and outlined in green color.		
8. New device			
Detected new power sensor.			
9. Device output			
output	Select consumer output type		
man. time	Managed consumer manual override timer		
P nominal	Enter power for device in case where power sensor is not assigned to device.		
clock	Enable timetable		
10. Permanent memory pa	rameters		
[init parameters]	Init all parameters to default values		
[save parameters]	Save all parameters to permanent memory		
[read parameters]	Read all parameters from permanent memory		
[] autosave parameters	Parameters will be automatically saved to permanent memory in 15 minutes after last parameter change		
11. WM / WR settings			
Scan w-less dev.	Press to start scanning for power sensors wirelessly connected via WM-1 module as well as for WR-1 relay. Scanning is active to 5 minutes.		
WM / WR binding	Press to add new WM-1 or/and WR-1 to existing group or to create new New group of wireless modules		
12. Backup / Restore to PC			
[backup]	Backup all parameters to PC		
[restore]	Restore all parameters from PC backup ²		

¹ only for the first power plant

From:

http://wiki.hiq-home.com/ -

Permanent link:

http://wiki.hiq-home.com/doku.php?id=en:robotina_charger:software&rev=1671025712

Last update: 2022/12/14 13:48



² older versions of backup files may be used. Any unsuccessfully backup or restored parameters will be displayed but operation will end successfully if you use **continue**.