

Count limits status

<input checked="" type="checkbox"/>	Count limits disabled
<input type="checkbox"/>	There are no occupancy restrictions
<input checked="" type="checkbox"/>	Occupancy under both limits
<input type="checkbox"/>	All entries are counted in the L1 quota (regardless of scanned code)
<input checked="" type="checkbox"/>	Occupancy under L2 and over L1 limit
<input type="checkbox"/>	Only users with code L2 are allowed to enter
<input checked="" type="checkbox"/>	Occupancy over both limits
<input type="checkbox"/>	Entry is not allowed

From:

<http://wiki.hiq-home.com/> -

Permanent link:

http://wiki.hiq-home.com/doku.php?id=en:sg3:configurator:count_status&rev=1606475200

Last update: **2020/11/27 11:06**

