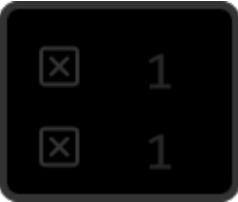
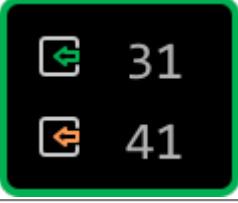
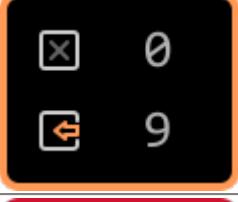
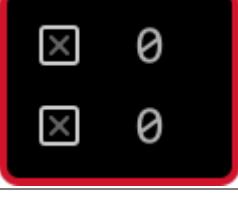


Count limits status

	Count limits disabled There are no occupancy restrictions
	Occupancy under both limits All entries are counted in the L1 quota (regardless of scanned code)
	Occupancy under L2 and over L1 limit Only users with code L2 are allowed to enter
	Occupancy over both limits Entry is not allowed

From:

<http://wiki.hiq-home.com/> -

Permanent link:

http://wiki.hiq-home.com/doku.php?id=en:sg3:configurator:count_status&rev=1606475222

Last update: **2020/11/27 11:07**

