


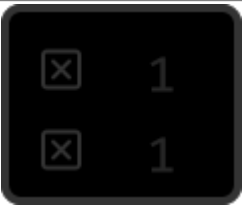


# Count limits status

|  |  |
|--|--|
|   | <b>Count limits disabled</b>   |
|  | There are no occupancy restrictions                                  |
|   | <b>Occupancy under both limits</b>                                   |
|  | All entries are counted in the L1 quota (regardless of scanned code) |
|   | <b>Occupancy under L2 and over L1 limit</b>                          |
|  | Only users with code L2 are allowed to enter                         |
|  | <b>Occupancy over both limits</b>                                    |
|  | Entry is not allowed   |

From: <http://wiki.hiq-home.com/> -

Permanent link: [http://wiki.hiq-home.com/doku.php?id=en:sg3:configurator:count\\_status&rev=1606475222](http://wiki.hiq-home.com/doku.php?id=en:sg3:configurator:count_status&rev=1606475222)

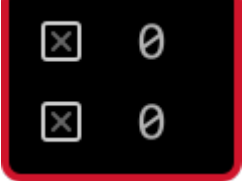Last update: **2020/11/27 11:07**

