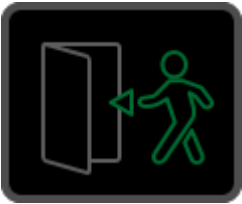

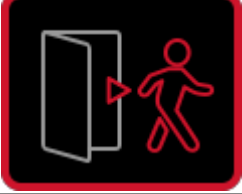


Entry status

	Entry idle
	Entry not allowed.
	Waiting to meet entry requirements.
	Entry grant
	All conditions for entry are met. Entry allowed.
	Entry alarm
	Detected entrance despite unfulfilled conditions.

From:
<https://wiki.hiq-universe.com/> -

Permanent link:
https://wiki.hiq-universe.com/doku.php?id=en:sg3:configurator:entry_status

Last update: **2020/11/27 11:20**

