

Alarms and notifications

The following page provides the description of the alarms and reports that can be configured and used by end-users.

Description

GoFlex HEMS support the following alarms:


- FOA service is not available (for more than 1 hour)
- IoT linker is offline (for more than 1 hour)
- HEMS controller is offline (for more than 1 hour)

and notification:

- Cyclic device begin the operation cycle

Configure alarms and notifications

From side menu select **Reports** as shown in the following figure.

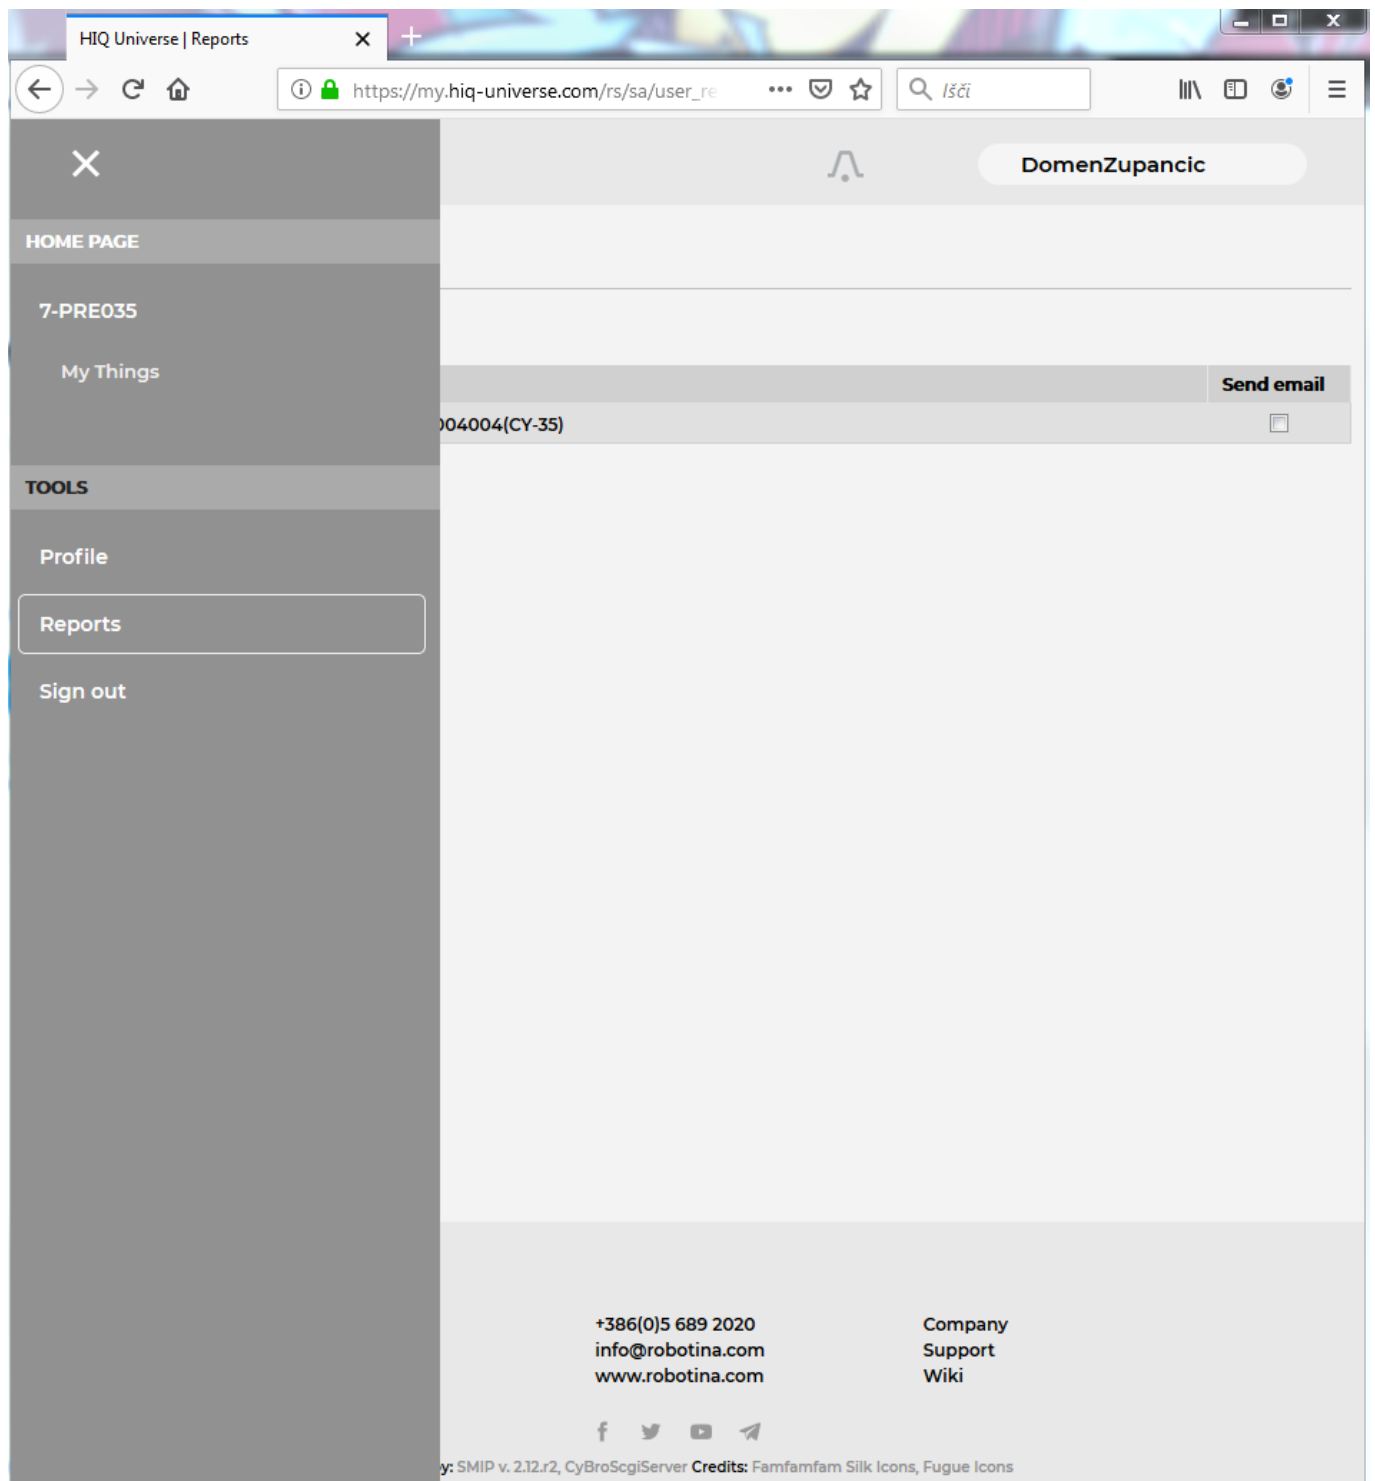

Apply the following steps (see figure below):

1. Check **send email** checkbox
2. Select language (optional, default is English)
3. Save changes

HIQ Universe | Reports

https://my.hiq-universe.com/rs/sa/user_re

Robotina HIQ Universe

DomenZupancic

Report configurations

Report	Send email
Events notification - HEMS-SN-004004(CY-35)	<input checked="" type="checkbox"/>

1. Check 'Send email' checkbox

Use language

My language

2. Select preferred language

Save configurations

* There are some unsaved changes

3. Save settings

robotina

OIC - Hrpelje 38
SI-6420 Kozina
Slovenia

+386(0)5 689 2020
info@robotina.com
www.robotina.com

Company
Support
Wiki

Powered by: SMIP v. 2.12.r2, CyBroScgiServer Credits: Famfamfam Silk Icons, Fugue Icons

Note for site-managers

Site manager is able to do similar procedure, as described in [previous section](#) for end-user. In addition to end-users, he can select multiple HEMS instances from his area and check **send-email** per instance, he would like to monitor and receive email notifications.

Last
update:
2019/09/06 11:16 en:goflex_hems:universe:alarms_notifications http://wiki.hiq-home.com/doku.php?id=en:goflex_hems:universe:alarms_notifications&rev=1567768562

From:
<http://wiki.hiq-home.com/> -

Permanent link:
http://wiki.hiq-home.com/doku.php?id=en:goflex_hems:universe:alarms_notifications&rev=1567768562

Last update: **2019/09/06 11:16**

