CONFIGURATION

MAIN PAGE

On this menu, the user can overview system operations.



The menus can be changed on the right side of the window.

Icons color meaning		
∡ Gray	This condition doesn't have to be met because it's disabled	
■ Grayed out	This condition is enabled, but it can't be met right now	
×Yellow	This condition must be met and is waiting for the person to do it	
∡ Green	Everything is okay, you're clear to enter	
■ Orange	From now on you can enter only with L2 allowance	
x Red	Something is wrong, you must not enter	

St	Status overview		
×	Occupation status and limit	It shows occupied status and remaining count to the limit of	
	count	people	
×	Disinfector status	It shows if person had applied a disinfector	
×	Allowance status	It shows if person has a fever and if he wears a facemask	
×	Card reader	It shows if the use of entry card is needed and the user's level of access	
×	Confirmation status	It shows if the receptionist had left you in and the person's level of access	
×	Enter status	It shows if person should enter or exit	



This is the gate status overview.

G	Gate status overview		
1	Door sensors	It TOF sensor detects person, the entrance arrow light (right) turns on for the people coming in, or the exit arrow light (left) turns on for the people going out	
If both red and green light are turned on, the entrance conditions must be not card, face sensor, disinfector,), if the green light is turned on you can entered light is turn on you can't enter. If the semaphore beeper is turned on along with a red light, the person must exit the building immediately. Beeper can be disabled on the System setup menu or it can be set that it resets where the person exits the building			
3	Gate status	It shows if gates are closed or open. Smart Gate system works with all kind of gates: normal, revolving door, sliding door,	
4	Presence status	It shows if the presence sensor has been triggered	

Thermo and mask camera status	It shows if person has a fever and if he wears a face mask. Two types of thermal scanner are supported. First one scans the face, checks if person is wearing a mask and measures the temperature. Doors are closed and if every condition is met, person can enter. Second scanner measures temperature of a person. Doors are opened and if it has a fever, the entrance is prevented. In the System setup menu allowance type can be set on permission mode for first instance, or it can be set on prevention mode, for second.		
6 Disinfector status	It shows if a person applied disinfector		
7 Code reader	It shows the status of access		
Configuration			
Set count	Set count for total number of people counted in space		
Confirm L1	If the condition for L1 access are met, the button will become enabled		
Confirm L2	If the condition for L2 access are met, the button will become enabled		
Reset alarm	Resets alarm		
Gate auto/gate opened	Switches between gates opening automatically with security measures or opening manually. When they can be opened manually it usually means it's because of emergency and everyone must leave the building immediately		

ACCESS SETTINGS

On this menu, the code and access status can be added.



Configuration		
Edit code	Manually input new user's code, alternatively you can scan it with the card scanner	
Туре	Set user level of access, which are L1 for normal users, L2 for VIPs and UL unlimited access (employees)	
Code list All the users are saved here, choose user to edit it's code and type, holds u		
Search	Checks the code list for desired code, which is inputted in the edit code sect The code number and type are then returned	
Save	Saves the created edit code	
Clear	Clears the edit code and type	
Delete	Deletes the code from the code list	

SYSTEM SETUP

When the system is connected and turned on, the technician sets these settings.



Configuration	
Limit 1	This is the limit for normal access, everyone can enter. After this limit is reached, only VIPs and employees can enter (no more L1 access)
Limit 2	This is the limit for VIP access, L2 and UL can enter. After this limit is reached, only employees can enter (UL access only)

	1	
Counting type		Choose if the counting of people is with digital IO or communication
		Set how long the presence sensor is active after detecting someone
		Set how long the entry doors are open after the TOF sensor has detected someone
		Set how long the exit doors are open after the TOF sensor has detected someone
Alarm duration		Sets duration time of the alarm
Alarm beeper enabled		Enable or disable alarm beeper
Reset alarm on e	xit	Enable or disable the reset of alarm on exit
allowance cond	litior	have to be met if everything is enabled: disinfection and must be met and then just one of other two conditions means either reader or confirmation condition
Disinfection		Sets if disinfection is necessary for user's level of access, sets time-out that triggers after check
Allowance		Sets if face mask and temperature check is necessary for user's level of access, sets time-out that triggers after check
Reader		Sets if scanning card on the reader is necessary for user's level of access, sets time-out that triggers after check
Confirmation		Sets if receptionist confirmation is necessary for user's level of access, sets time-out that triggers after check
Allowance type		If set on permission, door opens when user is clear to enter after ok allowance check, if set on prevention, door closes when users fails allowance check
Internet access	5	·
Enable push to server		Enable connection to the cloud server (allow controller to send periodical push message to server) every 30 seconds
Test Send		Send push message instantly
Reset	F	Reset number of sent messages
Push timer	9	Shows countdown after which the push message will be sent
Messages		Number of all sent messages and number of successfully sent messages
Roundtrip		Time it takes the message to get to server and the response to come back
code is s code is s code is s scanned they are		code which employee has on a card or qr code. When the master is scanned, red an green light will start flashing. If the master is scanned, then normal cards are scanned and master code is need again, all the normal cards will be added to the code list (if a ren't already on it) and they will be granted L2 access. If master is scanned and then scanned again, all the entries on code list will deleted
Send LAN code query	de If scanned code is not on the code list for that device, a query will be sent to other devices in the system. If it gets the response from other device, that the code is on it's list, access is granted	
Process LAN code query	Enal	ble to process code query and send back answer
LAN query timeout		query timeout. If the device that sent query doesn't get answer in time, it refuses access
Autodetect	todetect It searches for other controllers in the network and opens a menu with found controllers. If the other controller is chosen, you manage this one	

⁻ http://wiki.hiq-home.com/

Parameters configuration		
Init parameters Set parameters to the ones saved in permanent memory		
Save parameters Save set configuration to the permanent memory		
Read parameters	Read parameters from the permanent memory and write them to work parameters	

DISPLAY SETTINGS




Paramet	Parameters configuration for alphanumeric display		
Line 1			
Presence		Set text that will be displayed on first line when proximity detector detects someone	
Advertisin	ng 01-09	Set text that will be displayed when proximity detector isn't detecting anybody	
Advertisir	ng text time	Set timer at which the advertising text changes	
Line 2			
Counters		Displays number of people with L1 and with L2 access in the building	
Line 3			
Enter		Set the text that will be displayed when person is allowed to enter	
Disinfect		Set the text that will be displayed when person has to disinfect hands	
Camera		Set the text that will be displayed when person has to look at the camera	
Confirm		Set the text that will be displayed when waiting for confirmation to enter	
Code		Set the text that will be displayed when person has to scan the code	
Occupied		Set the text that will be displayed as long as the limit of people inside is reached	
Fever		Set the text that will be displayed if fever is detected	
Exit		Set the text that will be displayed if the person has to exit the building	
Parameters configuration for graphic display			
Caption			
Full	Set text tha	t will be displayed if the place is full	
Level 2	Set text that will be displayed when the limit of people for L1 access is reached and only people with L2 access are allowed to enter		
Level 1			
Alarm	Set text that will be displayed if alarm is triggered		
Warning			
Text			
Enter	Set the text that will be displayed when person is allowed to enter		
Disinfect	Set the text	that will be displayed when person has to disinfect hands	
Camera	Set the text	that will be displayed when person has to look at the camera	
Confirm	Set the text	that will be displayed when waiting for confirmation to enter	

Occupied	Set the text that will be displayed as long as the limit of people inside is reached	
Fever	Fever Set the text that will be displayed if fever is detected	
Exit	Set the text that will be displayed if the person has to exit the building	

CONFIGURATION EXAMPLES FOR DIFFERENT USES


-This configuration is useful when for example there's two entrances. One is for normal access, doors are open and everyone can enter without having to met any conditions. But the other is for VIPs only. Swiping L2 card or receptionist's confirmation is required to enter (e.g. stadium entrance for VIP lounges).



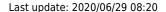




-This configuration is useful when for example you have one entrance for everyone, no code is required to enter, but all who enters have to apply disinfector and perform a face scan (e.g. when there's a danger to get infected or to infect others, like in a hospital).

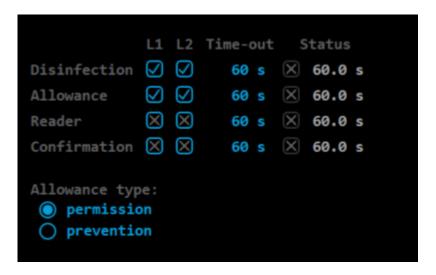






-This configuration is useful when for example there's two entrances, one entrance for normal access, but people who enter have to apply disinfector and perform a face scan. The other entrance is for VIP's, they have to swipe the card or get receptionist's confirmation to enter (e.g. on a airport where there's a main entrance for everyone who have to go through security measures to get on a plane and another entrance for people with private planes).

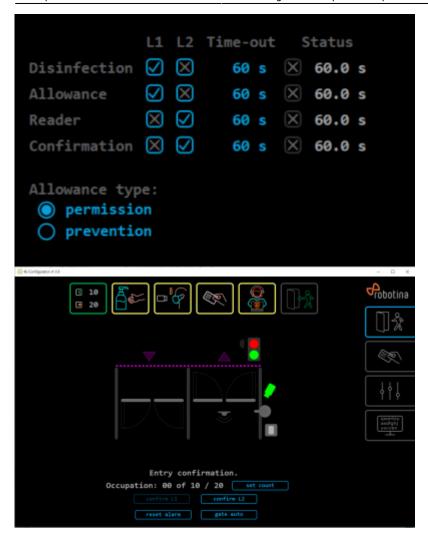



-This configuration is useful when for example there's just one entrance for everyone, but you are alone in the place where you're entering so you don't have to wear mask, but you can't be contagious so the people who enter behind you don't catch a disease (e.g. public toilet in a supermarket or

sleeping pod in the airport).

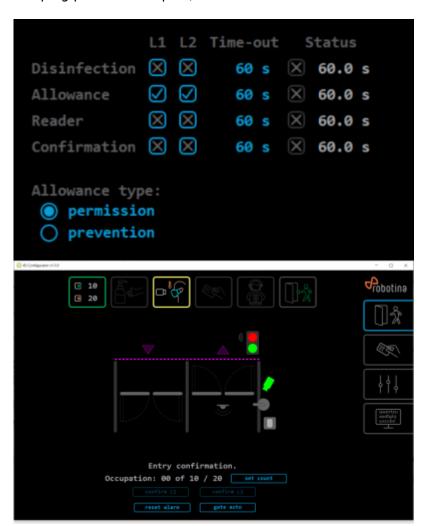




-This configuration is useful when for example there's two entrances with different level of security. For less secure entrance just a card is needed to enter, but for more secure entrance card can't be used in case it's stolen, so only receptionist can let you in (e.g. bank's vaults).







-This configuration is useful when for example there's just one entrance that is always open because allowance type is set on prevention. Only condition for entering is that face scan has to be performed. If someone enters without scanning or the fever is detected, entrance closes (e.g school's entrance).

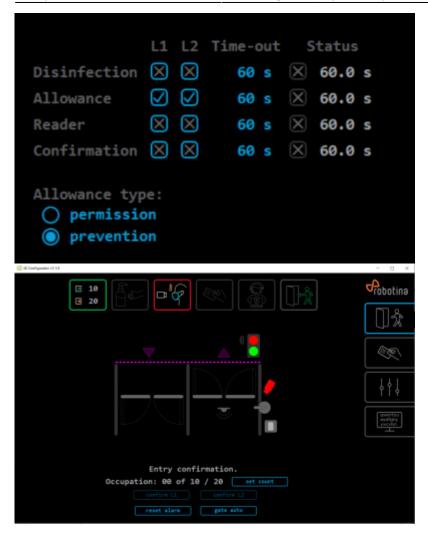



From:

http://wiki.hiq-home.com/ -

Permanent link:

http://wiki.hiq-home.com/doku.php?id=en:3s:configuration&rev=1593418854

Last update: 2020/06/29 08:20

