# **Wireless Modbus Relay**

#### Wireless Modbus Relay



| Model number: | WR-1            |
|---------------|-----------------|
| Frequency:    | ISM 868MHz (EU) |
| Dimensions:   | 93x45x27 mm     |


# **Applications**

• Remote controlled relay. Act as modbus RTU slave. Optimal for long range, no hopping.

### Installation and mounting

- Carefully open WR-1 module and configure serial communication with jumpers. (Default configuration is 9600bps, 8N1 with normal timeout)
- Place WR-1 module at least 10cm from other objects. Installation is not recommended inside metal cabinets.
- Connect RS485 terminals to WR-1 RS485 terminals
  - **A A**
  - **B B**
  - $\circ$  C GND
- Connect to 230V power supply
- Configure radio pairing

1/8

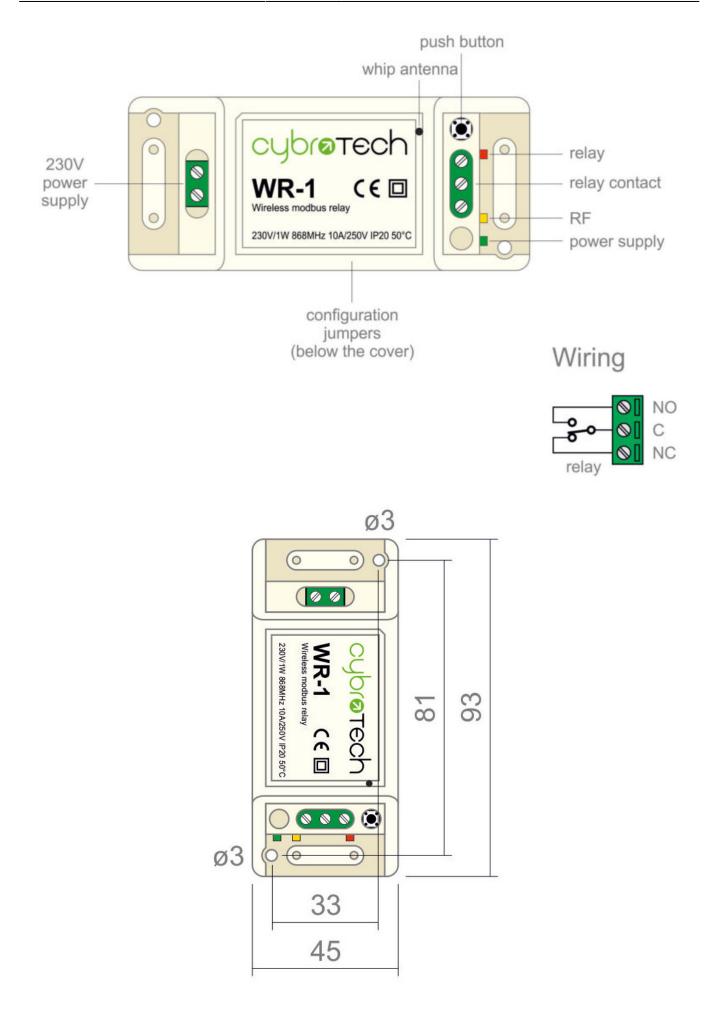


- remote controlled relay
- act as modbus RTU slave
- very long range, no hopping
- up to 8 relays per network
- protected private connection
- multiple addressable groups

# **Technical specification**

| Power supply:          | 230V, 50/60Hz, 1W |  |
|------------------------|-------------------|--|
| Ingress protection:    | IP20              |  |
| Operating temperature: | -2050°C           |  |
| Storage temperature:   | -4085°C           |  |
| Relative humidity:     | 085% n/c          |  |

# **Terminals and wiring**


| To power sensor |   |           |
|-----------------|---|-----------|
|                 |   | RS485 bus |
|                 | С |           |
|                 | L | 2201/ 10  |
| To power supply |   | 230V AC   |

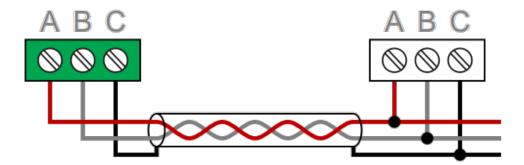

3/8

# Serial configuration and timeout


- Available baudrates 2400, 9600, 19200, 38400 bps
- Data bits and parity 8N1, 7E1, 8E1, 8N2
- Unax 64 bytes per transmition
- Integrated 240 Ohm termination resistor

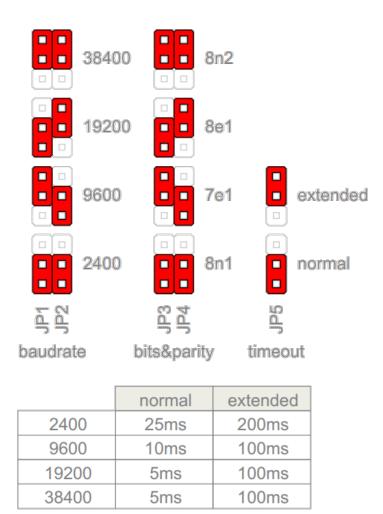

### **Radio pairing configuration**


#### Create new secure group

```
* turn on all devices as the same time
* within 10 seconds, while RF LED is blinking, press and hold button on one
of the devices
* after a second, the new address is randomly generated and sent to all
devices. RF LED will blink 3 times to confirm the new address.
```

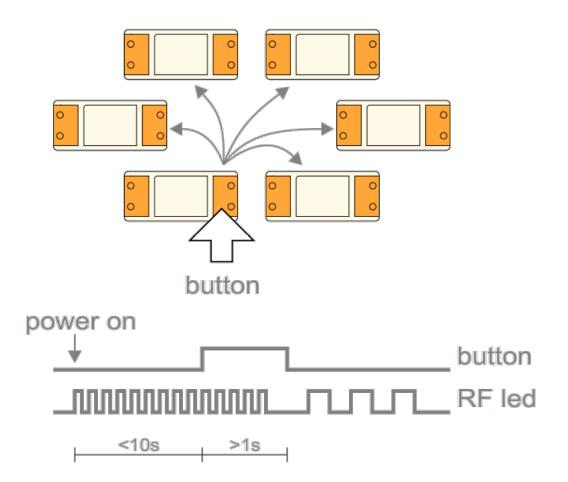


#### Add new device to the group

\* turn on the device
\* within 10 seconds, press and hold button on one of the existing devices
\* after a second, the existing group address is sent to the new device. RF
LED will blink 3 times to confirm the address is sent.

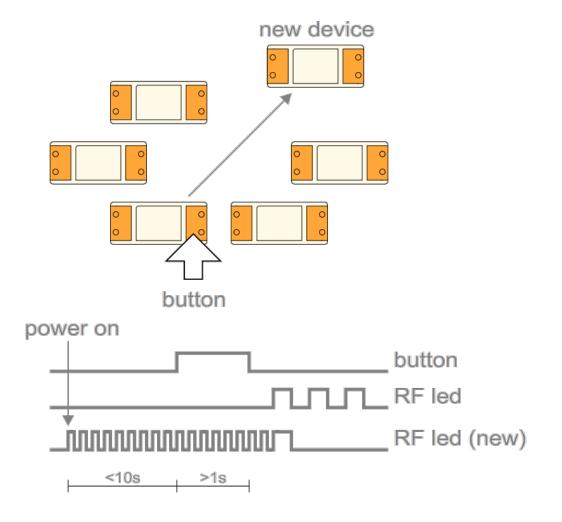


### **Examples**

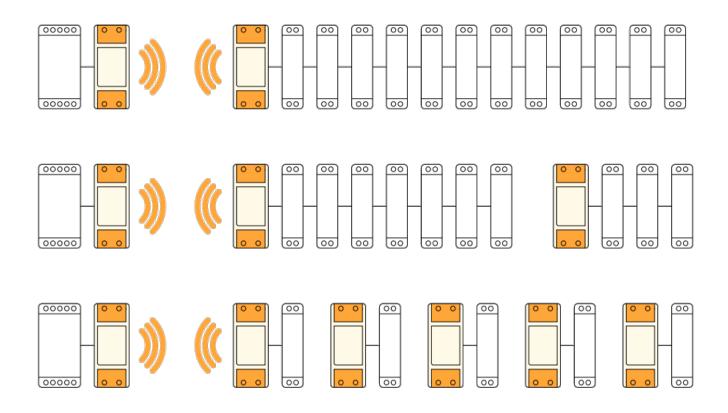

#### **Multiple groups**

\* When the system has two or more separate Modbus lines, they should be configured as separate groups.

- \* Each group has a single master and one or more slaves.
- \* Groups can't talk to each other, but they share the same bandwidth.
- \* Two masters may start transmitting at the same time causing collisions.
- \* To reduce number of missed messages, keep the traffic low.

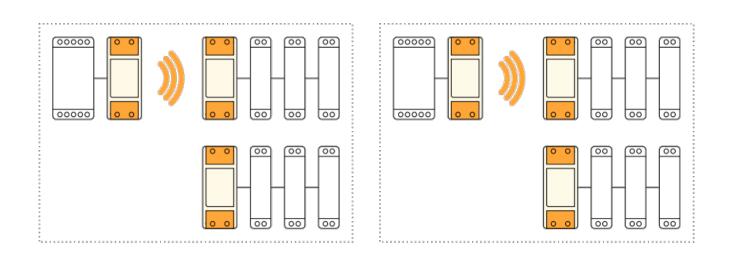


### **Connection check**

- Press button shortly
- RF LED will blink shortly on each connected device
- Serial interface is unaffected



### **Factory reset**

- Hold button and turn the device ON
- RF led will blink twice. Group address is now reset to default.
- Other devices will not be affected.

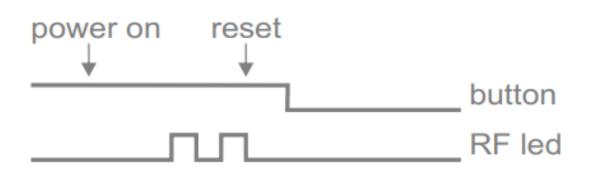

From: http://wiki.hiq-home.com/ -

Permanent link: http://wiki.hiq-home.com/doku.php?id=en:hiq\_hw:wr-1&rev=1669731855



Last update: 2022/11/29 14:24